


Professional Photographic Equipment


INSTRUCTIONS


P-SR Multi-function Photo/Video

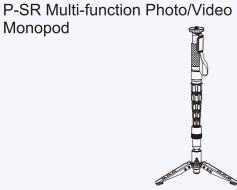


Guangdong SIRUI optical co., Itd

Address: The Third Industrial District, Wuguishan Town, Zhongshan City, Guangdong, China Tel: 0086-760-88897373 Fax: 0086-760-88207062 Service Hotline: 0086-400-8302299 E-mail: info@sirui-photo.com http://www.sirui.com

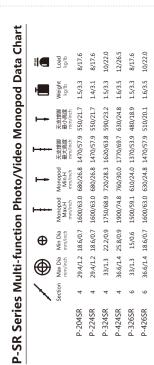

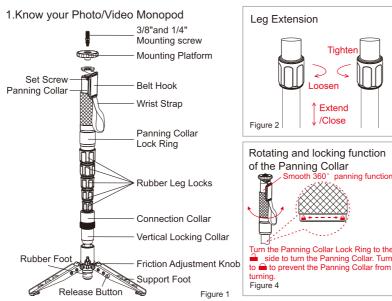

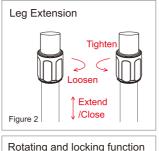


Turn the Panning Collar Lock Ring to the

ide to turn the Panning Collar. Turn


of the Panning Collar


Figure 4

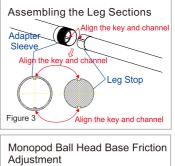


The Ball Friction Adjustment Knob adjusts the friction of the ball head (turn counterclockwise to decrease friction) or stops the ball from swiveling (turn clockwise to increase friction).



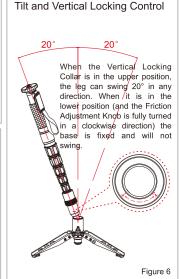

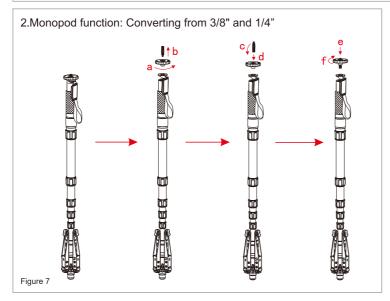

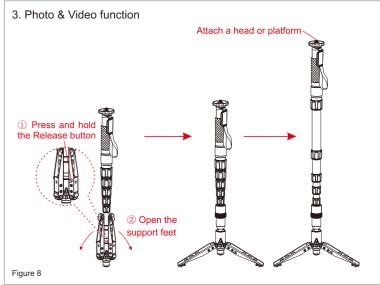

1. Know your Photo/Video monopod (Figure 1, 2, 3, 4, 5, 6)

The innovative SIRUI P-SR series Photo/Video Monopod provides control and flexibility not possible from conventional monopods. The Panning Collar on the top of the monopod has a rotating system for smooth panning (lockable); the bottom of the main body has a ball head system (with friction adjustment) that allows tilting 20° in any direction. A Vertical Locking Collar can lock the monopod in a vertical position. The three foldable support feet offer unparalleled stability, control and flexibility. The legs can be removed from the monopod and used as a separate tripod.

Figure 4:The Panning Collar Lock Ring is used for locking/unlocking the panning system (when the Panning Collar Lock Ring is twisted in a clockwise direction, the Panning Collar can turn 360°; when the Panning Collar Lock Ring is twisted in a counter-clockwise direction, the Panning Collar will be locked).


Figure 5:The Friction Adjustment Knob controls the amount of friction on the ball head base (when the knob is twisted in a counter-clockwise direction, the ball head friction will decrease; when it is twisted in a clockwise direction, the ball head friction will increase).


2. Monopod Function (Figure 7)


The mounting screw can be converted from 3/8" and 1/4" by unscrewing the mounting platform (turn counter clockwise), removing and reversing the mounting screw and re-tightening the mounting platform. The wrist strap provides added safety when using your monopod.

3. Photo/Video Function (Figure 8)

Open the support foot by pushing in the Release lock button and pulling down the foot until it locks into position. To close the support foot, push in the Release lock button and push the foot up towards the monopod. The Panning Collar can turn 360° and the Ball Head Base can swing 20° in any direction.

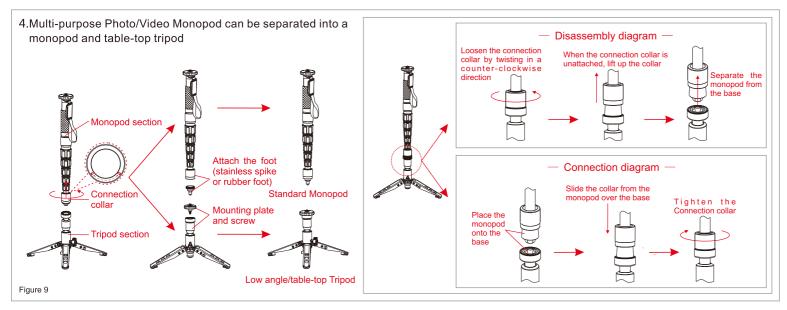

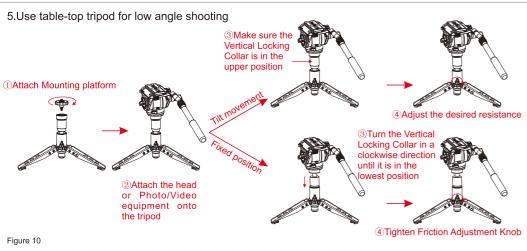

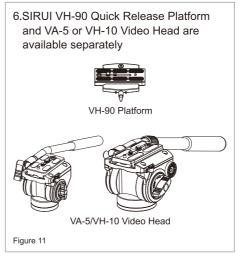

4. Separating the Photo/Video monopod into a monopod and table-top tripod. (Figure 9)

The Connection Collar is used for connecting and detaching the upper and lower sections of the monopod. Turn the Connection Collar in a counter-clockwise direction to separate the feet from the monopod. Turn the Connection Collar in a clockwise direction to re-attach the feet to the monopod.

- 5. Use table-top tripod for low angle shooting (Figure 10)
- 6. SIRUI VH-90 Quick Release Platform and VA-5 or VH-10 Video Head are available separately (Figure 11).
- 7. Belt Hook

When your work is finished, you can easily carry the closed monopod by attaching the Belt Hook onto your belt.

Caution:

 
- 1. Make sure the Rubber Leg Locks are locked before you try to separate the monopod from the feet.
- 2. Place the P-SR monopod on the ground with the support feet open and twist the Connection Collar in a counter-clockwise direction. Lift up the collar and remove the monopod. Attach the rubber foot or spike onto the monopod.
- 3. To prevent damage to the support leg, don't remove the rubber leg when the support feet is open. It should be used on flat surface

Warnin

The SIRUI P-SR Photo/Video monopod is not designed to be used as a stand-alone support. To prevent damage to your equipment, you must hold onto your equipment and/or keep your foot on the support feet at all times.

Attention:

Do not exceed the recommended maximum load weight (please refer to the manual).



This product should not be used in environments that exceed the following conditions ($-40 \sim +100^{\circ}\text{C}/-40 \sim +212^{\circ}\text{F}$). And, when used in

- damp, dirty or dusty environments, please clean and dry thoroughly after use, to assure proper functioning in the future. It is not recommended to expose this product to saltwater. If exposed, please clean with mild soap and warm water and towel dry.
- * Please keep from high temperatures and direct exposure to bright sunlight for extended periods of time.
- Please do not leave the equipment alone in a public place, which can be an inconvenience or hazard to others.
- To protect your camera gear, please remove it from the tripod/ball head when transporting from place to place.
- Please use a soft towel with warm water and mild soap to clean the locking system and gliding parts when necessary. Towel dry before storing the monopod.
- Under most situations, there is no need to lubricate any parts of this product. The addition of most lubricants will gum up the mechanisms and reduce their normal gliding characteristics. Please call or email us if you have any questions or special needs.
- Please keep this product away from all electrical power sources.



LINOITHAS

your shoulder or carry the monopod horizontally by the leg. Strong shaking may cause damage of the screw in the mounting plate and/or the camera. Please extend the legs from the biggest tube to smallest tube; close the legs from the smallest tube to biggest tube, to avoid leg joint bushing damage.