




Professional Photographic Equipment


INSTRUCTIONS

KX Series Ball Head

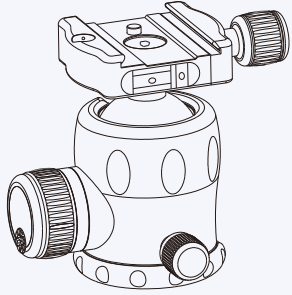

1. Know Your Ball Head

KX Series:

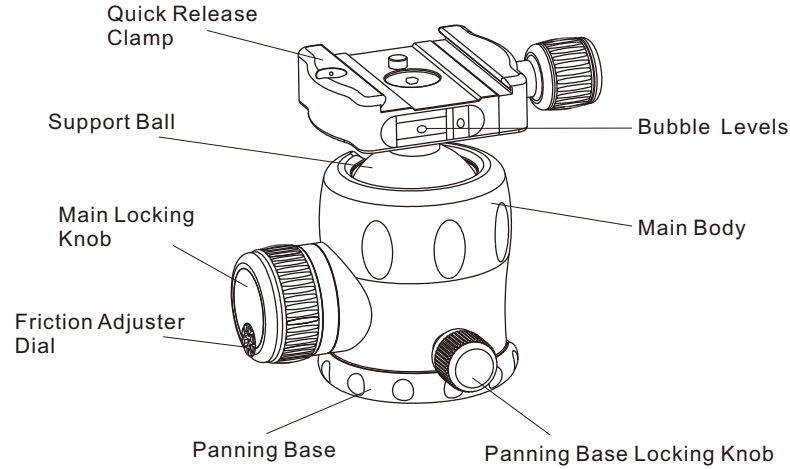

2. Attaching Your Ball Head

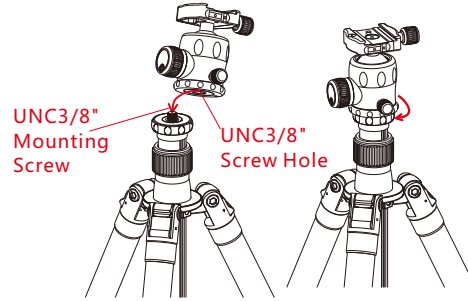


Figure 2-1

Figure 2-2

Quick Release Plate:
Slide-proof Rubber Mat


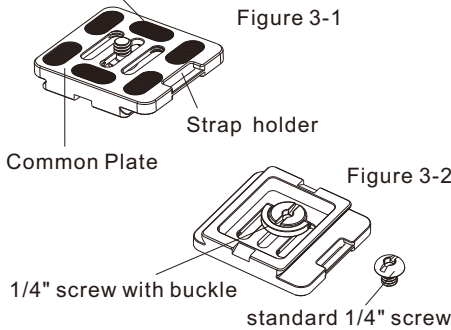


Figure 3-1

Figure 3-2

3. Know your Quick Release Clamp and Quick Release Plate

Quick Release Clamp:

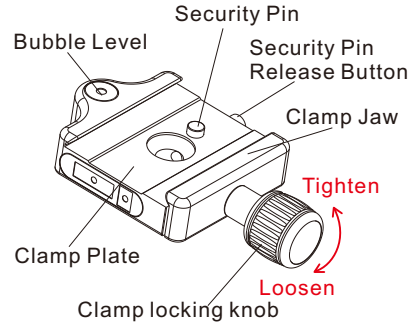

4. Attaching and Removing the Quick Release Plate

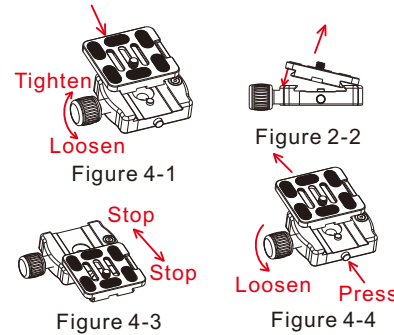


Figure 4-1

Figure 4-2

Figure 4-3

Figure 4-4

1. Know Your Ball Head

2. Attaching Your Ball Head

- To attach the ball head onto the tripod, you must make sure that the mounting screw of your tripod is 3/8". If it is 1/4" you will need to get a 3/8" screw or adapter. Many professional tripods have reversible screws. Please check your tripod manual for more details.
- Lock the Panning Base Locking Knob by turning it in a clockwise direction. As shown in Figure 2-1 & 2-2, align the 3/8" thread hole at the bottom of the Ball Head with the mounting screw on the tripod. Hold by the base of the Ball Head and rotate in a clockwise direction until it is locked tightly.

3. Know your Quick Release Clamp and Quick Release Plate

4. Attaching and Removing the Quick Release Plate

- Attaching the QR Plate to Your Camera**
Select the QR Plate that matches the base of your camera. (To prevent excessive wear to the camera's tripod socket, you should not frequently attach and remove the Quick Release Plate. It is quite common to leave the QR Plate permanently attached to the camera.)

The side of the Quick Release Plate with the slide-proof rubber mat must be facing the base of the camera. Make sure the QR Plate screw aligns with the tripod socket on the bottom of the camera.

Position the QR plate on the camera body and tighten the screw with a coin or allen key. If you plan to keep the quick release plate on your camera for a long period of time or you are using medium or large format cameras, you should tighten the screw with the allen key.

- Attaching the camera with QR Plate onto the Ball Head**

Slightly loosen the Clamp Locking Knob by turning it counter-clockwise, slide the QR plate laterally into the Quick Release Clamp (Figure 4-1) and tighten the clamp by turning clockwise. Another method is to fully open the Clamp Locking Knob and place the plate in from the top (Figure 4-2). Tighten the knob to lock the camera in place.

- Security Pin on the Quick Release Clamp**

There is a safety lock on the top of the Quick Release Clamp that effectively prevents the camera from sliding off of the clamp if it is slightly loosened (Figure 4-3). This allows you to make minor adjustments of the camera position on the Ball Head without worrying about the camera sliding off of the Quick Release Clamp. This feature is available with all Sirui QR plates. (Warning: While other styles of QR plates can be used on Sirui Ball Heads, this safety feature may not be available with other brands of QR plates. Even with the Sirui QR Plates, you should hold your camera while loosening the Quick Release Clamp).

- Removing the Camera with QR Plate from the Ball Head**

While holding the camera, loosen the Clamp Locking Knob by slightly turning it counter-clockwise. Push in the Security Pin Release Button and slide the camera off of the Clamp Plate (Figure 4-4). You can also remove the camera by fully opening the clamp and lifting the camera out of the clamp.

SIRUI Photographic Equipment Industry(Zhongshan) CO.,Ltd

Address: The Third Industrial District,Wuguishan Town,Zhongshan City,Guangdong,China
E-mail: info@sirui-photo.com http://www.sirui-photo.com http://www.zs.sirui.com
Tel: 0086-760-88897373 Fax: 0086-760-88207062 P.C: 528458
Service Hotline: (0086)400 830 2299

Model	Diameter mm/inch	Height mm/inch	Weight Kg/lb	Maximum Load Kg/lb
K-40X	54/2.1	124/4.9	0.8/1.76	35/77.2
K-30X	44/1.7	106/4.2	0.5/1.10	30/66.1
K-20X	38/1.5	98/3.9	0.4/0.88	25/55.1
K-10X	33/1.3	93/3.7	0.35/0.77	20/44.1


KX Series Ball Head Data Chart



Professional Photographic Equipment

INSTRUCTIONS

KX Series Ball Head

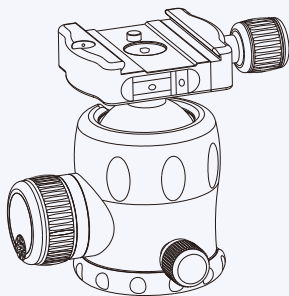

www.sirui-photo.com / www.zssirui.com

Address: The Third Industrial District, Wuguisan Town, Zhongshan City, Guangdong, China
Tel: 0086-760-88897373
Fax: 0086-760-88207062
P.C: 528458
E-mail: info@sirui-photo.com
http://www.sirui-photo.com http://www.zssirui.com
Service Hotline: (0086)400 830 2299



5. Factory Setting

 


Figure 5-1



Figure 5-3

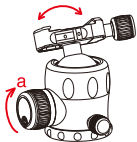


Figure 5-2


 


Figure 5-4

6. Basic Operation :

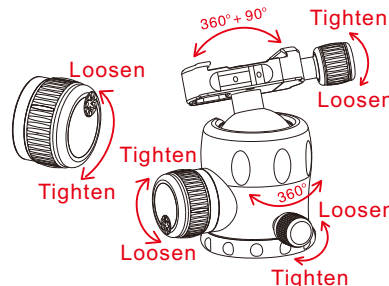

7. Adjusting the Ball Head

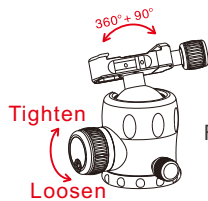


Figure 7-1



Figure 7-2

8. Unlocking the Ball Head :

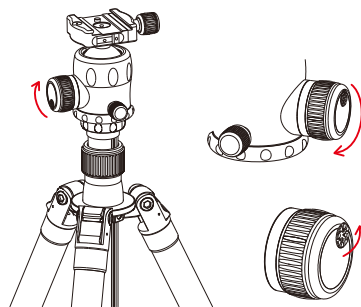


Figure 8-1

Figure 8-2

Announcements

- Do not exceed the recommended load limit of the ball head and/or tripod. (Please refer to product specifications)
- Please make sure that the locks are securely tightened when in use.
- This product should not be used in environments that exceed the following conditions (-40 ~ +100°C/-40 ~212°F).
- When used in damp, dirty or dusty environments, please clean and dry thoroughly after use, to assure proper functioning in the future.
- Please keep from high temperatures and direct exposure to bright sunlight for extended periods of time.
- To protect your camera gear, please remove it from the tripod/ball head when transporting from place to place.
- Prevent sand, grit and other foreign matter from getting into the interior of the Ball Head. If the Ball Head does not move smoothly, please use a clean, soft cloth to gently wipe the Ball mechanism.
- There is no need to lubricate any parts of this product. The addition of lubricants will gum up the mechanisms and reduce their normal gliding characteristics. The construction of Sirui professional Ball Heads is very precise, so extra maintenance is not needed.
- Please keep this product away from all electrical power sources.

Specifications are subject to change without notice.

e.Camera Screw Usage

The 1/4" screw with buckle can only be used in the middle slot of the QR Plate. The standard 1/4" screw can be used in the left or right slot, if the position of your camera's 1/4" tripod socket is off-center, as shown in Figure 3-2.

5.Factory Setting

- a.As shown in Figure 5-1, turn the Main Locking Knob in a clockwise direction about 1/2 turn. Next, turn the Friction Adjustment Dial in a counter-clockwise direction until it stops. Loosen the Main Locking Knob by turning in a counter-clockwise direction until it stops.
- b.As shown in Figure 5-2, while slowly rocking the camera, turn the Main Locking Knob clockwise until you feel the resistance you desire. Then turn the Friction Adjustment Dial clockwise until it stops (Figure 5-3).
- c.Turn the blue Calibration Ring (around the Main Locking Knob) to the 0 position (Figure 5-4).

6.Basic Operation

7.Adjusting the Ball Head

Mount your camera onto the Ball Head. While holding the camera, loosen the Main Locking Knob (Figure 7-1). The ball head will be very loose, so you will need to adjust the amount of resistance you prefer. Rotate the Friction Adjustment Knob that is in the Main Locking Knob in a counter-clockwise position until it stops. While slowly rocking the camera, tighten the Main Locking Knob until you feel the resistance you desire. The friction adjustment should be set so that there is enough resistance to prevent the camera from easily tipping over, while giving you the ability to make adjustments to camera position without having to use excessive force. This becomes very useful when using telephoto lenses and when critical alignments need to be made. When the resistance level you want is achieved, stop turning the Main Locking Knob. Turn the Friction Adjustment Knob in a clockwise position until it stops (Figure 7-2).

You may want to start shooting immediately or you can tighten the Main Locking Knob to firmly lock the head in place. Before locking the Ball Head, you may want to use the bubble levels to make sure it will be horizontal.

8.Unlocking the Ball Head

You may find that the Ball Head is locked in position (usually from excessive force) and needs to be released. Please follow the below instructions, paying attention to the turning directions.

If possible, mount the Ball Head on the tripod and turn the Main Locking Knob in a clockwise direction (Figure 8-1).

Turn the Friction Adjustment Dial in a counter-clockwise direction until it stops (Figure 8-2).

Note: the Quick Release plate has a strap holder that allows you to attach many popular camera straps directly onto the plate. Please make sure that the Quick Release plate is securely attached to the camera, to prevent the possibility of the camera detaching from the plate. Please check this attachment regularly.