

# HERO3<sup>+</sup>

BLACK EDITION

To download this user manual in a different language, visit **[gopro.com/support](https://gopro.com/support)**.

Pour télécharger ce manuel de l'utilisateur dans une autre langue, rendez-vous sur **[gopro.com/support](https://gopro.com/support)**.

Wenn Sie dieses Benutzerhandbuch in einer anderen Sprache herunterladen möchten, besuchen Sie **[gopro.com/support](https://gopro.com/support)**.

Per scaricare questo manuale utente in un'altra lingua, visita **[gopro.com/support](https://gopro.com/support)**.

Para descargar este manual de usuario en otro idioma, visite **[gopro.com/support](https://gopro.com/support)**.

Para baixar este manual do usuário em outro idioma, acesse **[gopro.com/support](https://gopro.com/support)**.

このユーザーマニュアルの他言語版をダウンロードするには、**[gopro.com/support](https://gopro.com/support)**にアクセスしてください。

若要下載其他語言版本的使用說明書，請前往：  
**[gopro.com/support](https://gopro.com/support)**。

如需下載本用戶手冊的其他語言版本，請訪問  
**[gopro.com/support](https://gopro.com/support)**。

Join the GoPro party at [facebook.com/gopro](https://www.facebook.com/gopro) to see what other GoPro owners are capturing and sharing. Share *your* footage and join the GoPro movement!



---

# TABLE OF CONTENTS

---

Accessories	4
Mounts + Accessories	5
HER03+ Features	6
Camera LCD Status Screen	8
Camera Menu Flow Chart	9
Camera Software Updates	10
Basics	10
Camera Modes	13
Camera Settings	19
Capture Settings	30
Set Up	42
Wi-Fi + Wi-Fi Remote	50
Connecting to GoPro App	51
Storage/microSD™ Cards	52
System Requirements	53
Transferring Files	54
Playback	55
Battery	56
Important Warning Messages	59
The Frame	60
Customer Support	62
Regulatory Information	62

---

---

# WEAR IT. MOUNT IT. LOVE IT.

---

## FEATURED ACCESSORIES

---



LCD Touch BacPac™

---



Wrist Housing

---



Battery BacPac™

---



Suction Cup

---



Wi-Fi Remote

---



Protective Lens + Covers

---



Chesty (Chest Harness)

---

More HERO3+ accessories available at [gopro.com](http://gopro.com)

---

**MOUNTS + ACCESSORIES**



Helmet Front Mount



Side Mount



Handlebar/Seatpost/  
Pole Mount



Tripod Mounts



Head Strap + QuickClip



Vented Helmet Strap Mount



Roll Bar Mount



Rechargeable Battery



Standard Housing



Curved + Flat Adhesive  
Mounts



Dual Battery Charger




Camera Tethers

---

## HERO3+ FEATURES

---

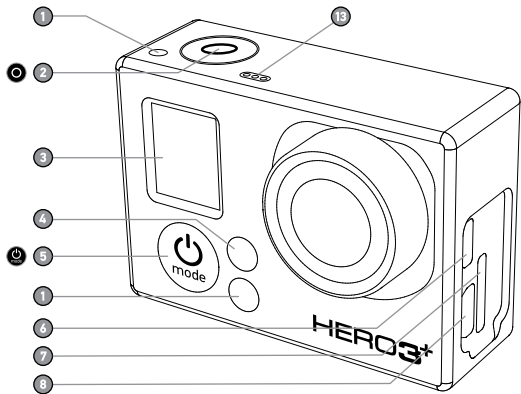


**1.** Camera Status Lights (Red)

**2.** Shutter/Select Button 

**3.** LCD Status Screen

**4.** Wi-Fi Status Lights (Blue)


**5.** Power/Mode Button 

**6.** Micro HDMI Port  
(Cable not included)

**7.** MicroSD Card Slot  
(SD card not included)

**8.** Mini-USB Port  
(Supports 3.5mm Mic Adapter and optional Composite A/C Cable)



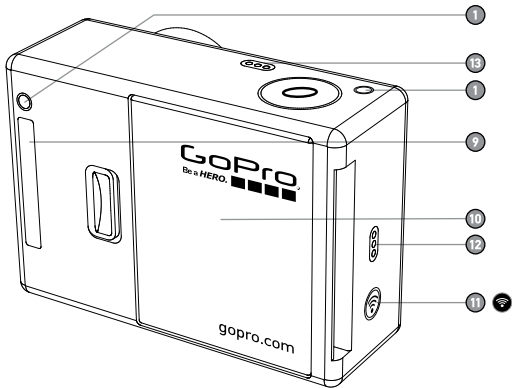

**9.** HERO Port

**10.** Battery Door

**11.** Wi-Fi On/Off Button 

**12.** Audio Alert


**13.** Microphone

---

## CAMERA LCD STATUS SCREEN

---


The LCD screen displays the following information about HERO3+ modes and settings:

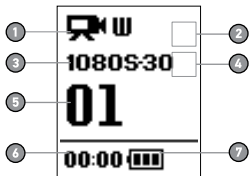

- 1. Camera Modes/FOV (Field of View)**
- 2. Capture Setting Modes** (not shown)
- 3. Resolution/fps (Frames Per Second)**
- 4. Time Interval Settings:** (not shown)
- 5. Counter**
- 6. Time/Storage/Files**
- 7. Battery Life**

**NOTE:** The icons displayed above will vary depending on what mode your camera is in.

# CAMERA MENU FLOW CHART

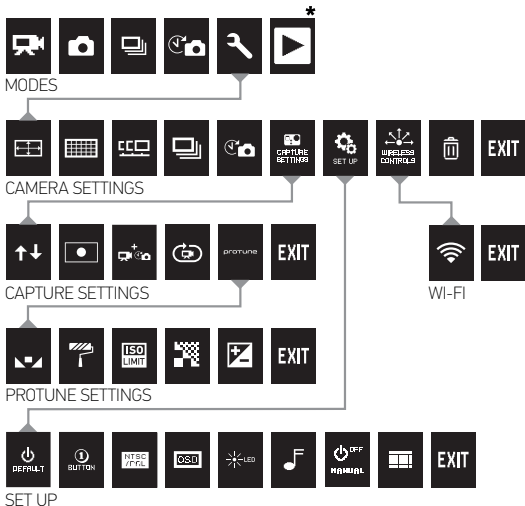

**\*Playback** only appears if camera is connected to a TV or LCD Touch BacPac™ (sold separately).

---

## CAMERA SOFTWARE UPDATES

---

- !** To get the latest features and best performance from your HERO3+ camera, make sure you're using the most current camera software. To check if software updates are available, visit: [gopro.com/update](http://gopro.com/update).


---

## USING YOUR HERO3+: BASICS

---

### GETTING STARTED


#### 1. Remove camera from The Frame.

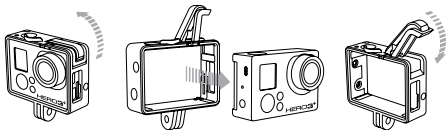

- #### 2. Remove camera side door and insert a microSD, microSDHC™ or microSDXC™ card into the card slot. A microSD card with a Class 10 speed rating is required.



 - #### 3. Open camera back door, insert battery, close camera back door.



- 4. Charge the battery.** The included lithium-ion battery comes partially charged. To charge, connect the included USB cable to camera and connect the other end of the cable to a power source such as a computer, Wall Charger or Auto Charger. No damage will occur to the camera or battery if used prior to a full charge.

**PRO  
TIP:**

**When camera is OFF and charging:**






- Red **Camera Status Light** will turn **ON** when camera is charging.
- Red **Camera Status Light** will turn **OFF** when charging is complete.

▶ See **BATTERY LIFE** for more information.

▶ See **PROTUNE** for more information.

## CAMERA DEFAULT SETTINGS

The HERO3+ Black Edition camera powers up with the following default settings:


	<b>Video</b>	1080p SuperView <b>30fps</b> , Auto Low Light <b>ON</b>
	<b>Photo</b>	12MP, Ultra Wide FOV
	<b>Burst Photo</b>	30 photos in 1 second
	<b>Time Lapse</b>	0.5 seconds
	<b>Wi-Fi</b>	<b>OFF</b>

**PRO  
TIP:**

Want to change your **VIDEO** and **PHOTO** settings?

▶ See **SETTINGS** menu to make changes.

### POWERING ON AND OFF

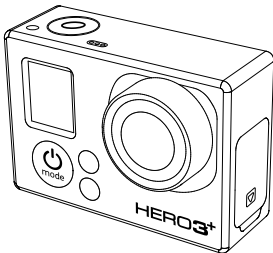

#### To power ON:

Press the **Power/Mode Button** . The red **Camera Status Lights** flash three times and the **Sound Indicator** emits three beeps.

#### To power OFF:

Press and hold the **Power/Mode Button** . The red **Camera Status Lights** flash several times and the **Sound Indicator** emits seven beeps.


#### PRO TIP:







Want to turn your HERO3+ into a "one-button" camera that automatically starts recording **PHOTOS** or **VIDEOS** once it turns **ON**? Set the camera to **ONE BUTTON** mode.

▶ See **ONE BUTTON** mode for more information.

# USING YOUR HERO3+: CAMERA MODES

## OVERVIEW

The HERO3+ features several camera modes. To cycle through the modes, press the **Power/Mode Button** . The modes will appear in the following order:

	<b>VIDEO</b>	Record <b>Video</b>
	<b>PHOTO</b>	Capture a single <b>Photo</b>
	<b>BURST PHOTO</b>	Capture up to 30 <b>Photos</b> in one second
	<b>TIME LAPSE</b>	Capture a series of <b>Photos</b> at timed intervals
	<b>SETTINGS</b>	Adjust camera <b>Settings</b>
	<b>PLAYBACK</b>	Playback <b>Video</b> and <b>Photos</b> . Appears only if camera is connected to a TV or LCD Touch BacPac™ (optional accessory, sold separately).

### PRO TIP:

Use **BURST PHOTO** to capture fast-moving subjects.



► See **PLAYBACK** for more information.

---


## USING YOUR HERO3+: CAMERA MODES

---


### VIDEO

To record **Video**, verify the camera is in **Video** mode. If the **Video** icon  on your camera's LCD screen is not showing, press the **Power/Mode Button**  repeatedly until it appears.

#### **To start recording:**

Press the **Shutter/Select Button** . The camera will emit one beep and the red **Camera Status Lights** will flash while recording.

#### **To stop recording:**



Press the **Shutter/Select Button** . The red **Camera Status Lights** flash three times and the camera emits three beeps to indicate recording has stopped.

The HERO3+ automatically stops recording when the memory card is full or the battery is out of power. Your video will be saved before the camera powers **OFF**.


▶ See **VIDEO** mode for instructions on how to change resolution settings.



### PHOTO

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon  on your camera's LCD is not showing, press the **Power/Mode Button**  repeatedly until it appears.

#### **To take a photo:**

Press and release the **Shutter/Select Button** . The camera beeps two times and the red **Camera Status Lights** flash.

- ▶ See **PHOTO** modes for instructions on how to change resolution settings and other **PHOTO** features.



---

## USING YOUR HERO3+: CAMERA MODES

---

### BURST PHOTO

In **Burst Photo** mode your camera takes multiple photos in short time intervals—**3 photos /1 second, 5 photos /1 second, 10 photos /1 second, 10 photos /2 seconds, 30 photos /1 second, 30 photos /2 seconds or 30 photos /3 seconds.**

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon  on your camera's LCD screen is not showing, press the **Power/Mode Button**  repeatedly until it appears.

#### To take a **Burst Photo** series:

Press the **Shutter/Select Button** . The red **Camera Status Lights** flash and the camera beeps multiple times.



#### **PRO TIP:**

Sometimes **30 photos /1 second** is too fast.  
Try a slower **BURST PHOTO** setting to better match the action.


▶ See **BURST PHOTO** for instructions on how to change the interval settings.

### TIME LAPSE


**Time Lapse** mode captures a series of photos at **0.5, 1, 2, 5, 10, 30** or **60** second intervals.

To capture a **Time Lapse** series, verify the camera is in **Time Lapse** mode. If the **Time Lapse** icon  is not showing on your camera's LCD screen, press the **Power/Mode Button**  repeatedly until it appears.

#### **To take Time Lapse:**

Press the **Shutter/Select Button** . The camera initiates countdown and the red **Camera Status Lights** flash each time a **Photo** is taken.

#### **To stop Time Lapse:**

Press the **Shutter/Select Button** . The red **Camera Status Lights** flash three times and the camera emits three beeps to indicate that **Time Lapse** has stopped.

▶ See **TIME LAPSE** for instructions on how to change the interval settings.

---

## USING YOUR HERO3+: CAMERA MODES

---

### **SETTINGS**

The **Settings** menu allows you to adjust a variety of camera settings including:

 **Video Resolution**

 **Photo Resolution**


 **Time Lapse**

 **Burst Photo**

 **Continuous Photo**









► See **SETTINGS** menu to make changes, learn how to navigate menu options and read more details on each setting.

### **PLAYBACK**

Playback **Video** and **Photos** by connecting your HERO3+ to a TV (requires Micro HDMI, Composite or Combo Cable, sold separately). You can also playback **Video** and **Photos** on the LCD Touch BacPac™ (optional accessory, sold separately). The **Playback** icon  appears only if camera is connected to a TV or LCD Touch BacPac.

► See **PLAYBACK** for more information on viewing your **VIDEOS** and **PHOTOS**.

 **SETTINGS****To enter the Settings menu:**

1. Verify the camera is in the **Settings** mode. If the **Settings** icon  on your camera's LCD screen is not showing, press the **Power/Mode Button**  repeatedly until it appears.
2. Press the **Shutter/Select Button**  to enter **Settings** menu .
3. Use the **Power/Mode Button**  to cycle through the various **Settings** options.
4. Press the **Shutter/Select Button**  to select desired option.
5. To exit, hold down the **Shutter/Select Button**  for two seconds or cycle through to **EXIT** and press the **Shutter/Select Button** .

**PRO  
TIP:**

If at any time you wish to exit from the **Settings** menu, press and hold the **Shutter/Select Button**  for two seconds.


 






## CAMERA SETTINGS



### VIDEO RESOLUTION/ FPS/FOV MODES

You can change **Resolution**, **fps** (frames per second) and **FOV** (field of view) in the **Video** mode menu. You can also turn **Auto Low Light** mode **ON/OFF**.

#### Once in the Settings menu:

1. Press the **Shutter/Select Button**  to enter .
2. Use the **Power/Mode Button**  to cycle through options.
3. Press the **Shutter/Select Button**  to enter desired menu.
4. Use the **Power/Mode Button**  to cycle through each sub-menu option and the **Shutter/Select Button**  to select it.
5. To change additional options, repeat step 4.
6. To exit, hold down the **Shutter/Select Button**  for two seconds or cycle through to **EXIT** and press the **Shutter/Select Button**  to select it.



Make sure **Auto Low Light** mode is turned **ON** (default) when shooting in low-light environments or if quickly transitioning in and out of low-light conditions. The camera will automatically adjust fps to achieve the optimal exposure and best results. Available in select video modes only.

---

## CAMERA SETTINGS

---

### The HERO3+ Black Edition offers the following Video capture modes:

Video Resolution	NTSC fps	PAL fps	Protune	Field of View (FOV)	Screen Resolution
4K / 4K 17:9	15 12	12.5 12	Yes	Ultra Wide	3840x2160, 16:9 4096x2160, 17:9
2.7K / 2.7K 17:9	30 24	25 24	Yes	Ultra Wide Medium	2704x1524, 16:9 2704x1440, 17:9
1440p	48 30 24	48 25 24	Yes	Ultra Wide	1920x1440, 4:3
1080p	60 48 30 24	50 48 25 24	Yes	Ultra Wide Medium Narrow	1920x1080, 16:9
1080p SuperView*	60 48 30 24	50 48 25 24	Yes	Ultra Wide	1920x1080, 16:9
960p	100 60 48	100 50 48	Yes Yes No	Ultra Wide	1280x960, 4:3
720p	120 60	100 50	Yes Yes	Ultra Wide Medium** Narrow	1280x720, 16:9
720p SuperView*	100 60 48	100 50 48	Yes Yes No	Ultra Wide	1280x720, 16:9
WVGA	240	240	No	Ultra Wide	848x480, 16:9

\*SuperView delivers the world's most immersive field of view.

\*\*720p120 and 720p100 only support Ultra Wide and Narrow FOV.

**NOTE:** Protune mode is only possible in select Video resolutions.

---

## CAMERA SETTINGS

---

Video Resolution	Best Use
4K / 4K 17:9	Stunning high-resolution video with professional low-light performance. Pull 8MP stills from video. Recommended for tripod or fixed position shots.
2.7K / 2.7K 17:9	16:9 / 17:9 resolution video downscales to provide stunning, cinema-quality results for professional productions. Recommended for tripod or fixed position shots.
1440p	Recommended for body-mounted shots as larger viewing area and high frame rate yield the smoothest, most immersive results for high-action capture.
1080p	1080p60 is great for all shots as high resolution and frame rate yield stunning results. Tripod or fixed mounting for 1080p48 and 30 fps and 1080p24 is ideal for television and film productions.
1080p SuperView	Recommended for body- or gear-mounted shots. More vertical 4:3 content is automatically stretched to full-screen 16:9 for greater viewing enjoyment.
960p	Use for body-mounted shots and when slow motion is desired. Provides large viewing area and smooth results for high action capture.
720p	Good for handheld shots and when slow motion is desired.
720p SuperView	Good for body- or gear-mounted shots. More vertical 4:3 content is automatically stretched to full-screen 16:9 for greater viewing enjoyment.
WVGA	Good when super slow motion is desired and standard definition is acceptable.

---






## PHOTO RESOLUTION MODES

The HERO3+ can capture photos at **12MP**, **7MP** and **5MP** resolutions. Any change to photo resolution also affects photos captured in **Photo**, **Photo Burst** and **Time Lapse** modes.

Photo Resolution	Field of View (FOV)
12MP	Ultra Wide (Default)
7MP	Ultra Wide, Medium
5MP	Medium



## CONTINUOUS PHOTO

**Continuous Photo** mode allows you to capture a series of **Photos** continuously while holding down the **Shutter/Select Button**  button.

3 photos every 1 second

5 photos every 1 second

10 photos every 1 second

**NOTE:** Your camera will remain in **Continuous Photo** mode until you return it to single **Photo** capture mode.


---

## CAMERA SETTINGS

---



### BURST PHOTO OPTIONS

**Burst Photo** mode captures a series of **Photos** when the **Shutter/Select Button**  is pressed. **Photos** can be captured at the following rates:

---

3 photos in 1 second

---

5 photos in 1 second

---

10 photos in 1 second

---

10 photos in 2 seconds

---

30 photos in 1 second (Default)

---

30 photos in 2 seconds

---

30 photos in 3 seconds

---



### TIME LAPSE

Several time interval options are available for **Time Lapse** mode, including **0.5, 1, 2, 5, 10, 30** and **60** seconds.

CAPTURE  
SETTINGS

## CAPTURE SETTINGS MENU

**Capture Settings** allows you to adjust the following advanced capture options:

**Camera Orientation****Spot Meter****Simultaneous Video and Photo****Looping Video**

protune

**Protune****White Balance\*****Color\*****ISO Limit\*****Sharpness\*****Exposure\***

▶ See **CAPTURE SETTINGS** section for a complete list of capture options.

*\*White Balance, Color, ISO Limit, Sharpness and Exposure are only available while shooting in Protune.*

---

# CAMERA SETTINGS

---



## SET UP MENU

The **Set Up** menu allows you to adjust the following camera settings:



**Default mode at Power Up**



**One Button Mode**



**NTSC/PAL**



**On Screen Display**



**Camera Status Lights**



**Sound Indicator**



**Month/Day/Year/Time**


▶ See **SET UP** menu section for a complete list of set up options.



## WIRELESS CONTROLS

The camera's built-in **Wi-Fi** allows you to connect to the Wi-Fi Remote or smartphone/tablet via the GoPro App. When **Wi-Fi** is **ON**, a **Wi-Fi** status icon will appear on the camera's **LCD Status Screen** and the blue **Wi-Fi Status Lights** will blink intermittently. When you turn **OFF** the **Wi-Fi**, the **Wi-Fi Status Lights** flash seven times.

### To turn Wi-Fi ON/OFF:

Press the **Wi-Fi On/Off Button**  to turn **Wi-Fi ON/OFF**. The most recently used **Wi-Fi** mode will be active when **Wi-Fi** is **ON**.

▶ See **WIRELESS CONTROLS** section for a complete list of wireless functions

**NOTE:** *Your camera cannot connect to the Wi-Fi Remote and GoPro App at the same time.*

## CAMERA SETTINGS



### DELETE












Delete the last file or all files and format the memory card. During delete **LAST** or **ALL**, the **Camera Status Lights** blink until operation is complete.

CANCEL (Default)

LAST

ALL (Formats SD card)

### To delete **LAST** or **ALL**:

1. Verify the camera is in **Settings** mode. If the **Settings** icon  on your camera's LCD screen is not showing, press the **Power/Mode Button**  repeatedly until it appears.
2. Press the **Shutter/Select Button**  to enter **Settings** menu .
3. Use the **Power/Mode Button**  to cycle through **Settings** to locate the **Trash** .
4. Press the **Shutter/Select Button**  to enter **Delete**.
5. Use the **Power/Mode Button**  to cycle through options.
6. Select highlighted option by pressing the **Shutter/Select Button** .
7. To exit, hold down the **Shutter/Select Button**  for two seconds or cycle through to **EXIT** and press the **Shutter/Select Button** .


### PRO TIP:

Use caution—by selecting **ALL**, the memory card will be formatted, deleting every file on your SD card.

**EXIT** EXIT

From the **EXIT** screen, press the **Shutter/Select Button**  to exit the **Settings** menu.

**PRO  
TIP:**














If at any time you wish to exit from the **Settings** menu, press and hold the **Shutter/Select Button**  for two seconds.

# CAPTURE SETTINGS



## CAPTURE SETTINGS

### To enter the Capture Settings menu:

1. Verify the camera is in **Settings** mode. If the **Settings** icon  on your camera's LCD screen is not showing, press the **Power/Mode Button**  repeatedly until it appears.
2. Press the **Shutter/Select Button**  to enter the **Settings** menu .
3. Use the **Power/Mode Button**  to cycle through **Settings** to locate the **Capture Settings** menu .
4. Press the **Shutter/Select Button**  to enter **Capture Settings**.
5. Use the **Power/Mode Button**  to locate the desired option to change.
6. Press the **Shutter/Select Button**  to select the desired option.
7. Some options have a sub-menu. Use the **Power/Mode Button**  to cycle through the sub-menus.
8. Press the **Shutter/Select Button**  to select a highlighted option.
9. To exit, hold down the **Shutter/Select Button**  for two seconds or cycle through to **EXIT** and press the **Shutter/Select Button**  to select it.



---

## CAPTURE SETTINGS

---

You can customize the way your HERO3+ camera captures **Video** and **Photos** in the **Capture Settings** menus, such as **Upside Down**, **Looping Video** and **White Balance**.



UPSIDE DOWN

Mounting your HERO3+ **Upside Down** but wish the files to appear upright when viewing or editing? This setting eliminates the need to flip your **Video** or **Photos** after recording.




Camera right side up (Default)



Camera upside down



SPOT METER

Turn on **Spot Meter** when filming from within a dark space pointing the camera into a brighter setting, such as filming the outdoors from within a car. When **Spot Meter** is set to **ON**,  appears in the LCD window.

OFF (Default)

ON

---

---

## CAPTURE SETTINGS

---



### SIMULTANEOUS VIDEO AND PHOTO

**Simultaneous Video and Photo** mode, allows you to simultaneously capture both **Videos** and **Photos**. You can set the camera to take a **Photo** every **5 seconds**, **10 seconds**, **30 seconds** or **60 seconds** while you record **Video**.

To set your camera to **Picture In Video** mode, verify that a supported **Video** resolution is selected and that **Protune** is turned **OFF**.

---

OFF

---

5 seconds

---

10 seconds

---

30 seconds

---

60 seconds

---


**NOTE:** You can capture **Simultaneous Video and Photo** in one of the following resolution settings: 1080p24 fps, 1080p30/25 fps, 720p60/50 fps or 1440p24 fps.

**Simultaneous Video and Photo (continued):**

Your resulting **Photo** size is determined by the **Video** dimensions you select.

<b>Video Mode</b>	<b>FOV</b>	<b>Photo MP</b>
1440p24 fps	Wide	12MP
1080p30/25 fps	Wide	8MP
	Medium	5MP
	Narrow	2MP
1080p24 fps	Wide	8MP
	Medium	5MP
	Narrow	2MP
720p60/50 fps	Wide	8MP
	Medium	5MP
	Narrow	2MP

**PRO TIP:**

While capturing **Video** you can manually take a **Photo** at any time by simply pressing the **Power/Mode Button** .


---

## CAPTURE SETTINGS

---



### LOOPING VIDEO

**Looping Video** mode allows you to record a continuously looping video that overwrites itself until you press the **Shutter/Select Button**  button to stop it. **Looping Video** is not available if **Protune** mode is turned **ON**.

#### Looping Video options include:

---

OFF (Default)

---

Max video Camera records until memory card is full, then overwrites with a new video.

---

5 min video Camera records for 5 minutes, then begins a new video, progressively overwriting the previous 5 minute video.

---

20 min video Camera records for 20 minutes, then begins a new video, progressively overwriting the previous 20 minute video.

---

60 min video Camera records for 60 minutes, then begins a new video, progressively overwriting the previous 60 minute video.

---

120 min video Camera records for 120 minutes, then begins a new video, progressively overwriting the previous 120 minute video.

---

#### PRO TIP:

Multiple chapter files are written to your memory card. This allows for small segments of content to be overwritten during loop recording. When viewing on a computer screen, you will see separate files for each time segment. Use video editing software if you wish to combine files into a longer video.

**NOTE:** **Looping Video** is disabled in **Protune** mode.

### PROTUNE

**Protune** is a video mode that unlocks the camera's full potential, yielding stunning image quality and cinema-caliber video optimized for professional productions. **Protune** gives content creators more flexibility and workflow efficiency than ever before.

#### **PROTUNE KEY BENEFITS:**

##### **High-Quality Image Capture**

**Protune**'s high data rate captures images with less compression, giving content creators higher quality for professional productions.

##### **Advanced Control**

Protune enables manual control of **White Balance**, **Color**, **ISO Limit**, **Sharpness** and **Exposure** for advanced control and customization of your video footage.

##### **Film/TV Rate Standard**

While shooting in **Protune**, you have the option of recording video in cinema-quality 24 fps to easily intercut GoPro content with other source media without the need to perform fps conversion.

Turning **Protune ON** affects several settings and features, such as **Video Resolution**, **fps**, **FOV** and **Simultaneous Video and Photo**.

---

OFF (Default)

---

ON

---

---

## CAPTURE SETTINGS

---

### **PROTUNE RESOLUTIONS:**

**Protune** is available in the following resolutions:

<b>Resolution</b>	<b>fps</b>
4K / 4K 17:9	15, 12.5, 12
2.7K / 2.7K 17:9	30, 25, 24
1440p	48, 30, 25, 24
1080p	60, 50, 48, 30, 25, 24
1080p SuperView	60, 50, 48, 30, 25, 24
960p	100, 60, 50
720p	120, 100, 60, 50
720p SuperView	100, 60, 50

**COMPATIBILITY: Protune** is compatible with professional color correction tools, GoPro Studio and other video editing software.

### PROTUNE SETTINGS

Protune enables advanced control of **White Balance**, **Color**, **ISO Limit**, **Sharpness** and **Exposure**.

**PRO  
TIP:**

Making adjustments to your **Protune** settings will not affect your non-**Protune** video modes. You can reset your **Protune** settings to their default states by selecting **RESET** in the **Protune** menu.

## CAPTURE SETTINGS



### WHITE BALANCE

**White Balance** adjusts the overall color tone of videos. You can make adjustments to **White Balance** when shooting in **Protune** mode.

White Balance Setting	Recommended Lighting Conditions
Auto (Default)	
3000K	Warm light (incandescent or sunrise/sunset lighting)
5500K	Slightly cool light (cool fluorescent or average daylight)
6500K	Cool light (overcast conditions)
Cam RAW	Industry standardized optimized color

#### PRO TIP:

**Cam RAW** mode yields a minimally processed data file direct from the image sensor that allows for more precise adjustments to be made in post-production. Recording in **Cam RAW** takes full advantage of the image sensor's capabilities.





## COLOR

**Color** allows you to adjust the color profile of your video footage. There are two **Color** options: **GoPro Color** (default) and **Flat**. **GoPro Color** delivers the same great color you capture when **Protune** is turned **OFF**. **Flat** results in a neutral color profile that can be color-corrected to better match footage captured with other equipment, offering more flexibility in post-production. Due to its log curve, **Flat** captures more details in shadows and highlights.

Color Setting	Resulting Color Profile
GoPro Color (Default)	GoPro color-corrected profile
Flat	Flat, neutral color profile

---

## CAPTURE SETTINGS

---



### ISO LIMIT

**ISO Limit** adjusts the camera's sensitivity in low-light environments, and creates a balance between brightness and resulting image noise. A higher **ISO Limit** will result in brighter footage, but you may experience more noise. A lower **ISO Limit** will result in darker footage, but will deliver reduced noise.

ISO Limit Setting	Resulting Video Quality
6400 (Default)	Brighter video in low light, increased image noise
1600	Moderately bright video in low light, moderate image noise
400	Darker video in low light, reduced image noise



### SHARPNESS

**Sharpness** controls the sharpness of your video footage. There are three **Sharpness** options: **Low**, **Medium** and **High**.

Sharpness Setting	Resulting Video Quality
High (Default)	Ultra-sharp video
Medium	Moderately sharp video
Low	Softer video that allows for more flexibility in post-production



## EXPOSURE

**Exposure** compensation affects the brightness of your video. Adjusting **Exposure** can improve image quality when shooting in environments with contrasting lighting conditions.

**Exposure Settings**

+2.0	+1.5	+1.0	+0.5	0 (Default)	-0.5	-1.0	-1.5	-2.0
------	------	------	------	-------------	------	------	------	------


**PRO TIP:**

**Exposure** compensation adjusts brightness within the existing **ISO Limit**. If brightness has already reached the **ISO Limit** in a low-light environment, increasing your **Exposure** compensation will not have any effect.

**EXIT** EXIT

From the **EXIT** screen press the **Shutter/Select Button**  to exit the **Capture Settings** menu.

**PRO TIP:**

If at any time you wish to exit from the **CAPTURE SETTINGS** menu, press and hold the **Shutter/Select Button**  for two seconds.

---












# SET UP

---



## SET UP

### To enter the Set Up menu:

1. Verify the camera is in **Settings** mode. If the **Settings** icon  on your camera's LCD screen is not showing, press the **Power/Mode Button**  repeatedly until it appears.
2. Press the **Shutter/Select Button**  to enter the **Settings** menu .
3. Use the **Power/Mode Button**  to cycle through **Settings** to locate the **Set Up** menu .  
SET UP
4. Press **Shutter/Select Button**  to enter **Set Up**.
5. Use the **Power/Mode Button**  to locate the desired option to change.
6. Press **Shutter/Select Button**  to select the desired option.
7. To exit, hold down **Shutter/Select Button**  for two seconds or cycle through to **EXIT** and press **Shutter/Select Button**  to select it.



## DEFAULT MODE AT POWER UP

You can set the camera's **Default** mode at power up to any of the following modes:



**VIDEO** (default)



**PHOTO**



**BURST PHOTO**



**TIME LAPSE**

---

# SET UP

---



## ONE BUTTON

With **One Button** mode selected, the camera automatically begins recording when powering the camera **ON**. **One Button** mode can be configured to start in **Video** or **Time Lapse**.

---















OFF (Default)


---

ON

---






### To turn One Button mode ON:

1. Verify the camera is in **Settings** mode. If the **Settings** icon  on your camera's LCD screen is not showing, press **Power/Mode Button**  repeatedly until it appears.
2. Press the **Shutter/Select Button**  to enter the **Settings** menu .
3. Use the **Power/Mode Button**  to cycle through **Settings** to locate the **Set Up** menu .  
SET UP
4. Press the **Shutter/Select Button**  to enter **Set Up**.
5. Use the **Power/Mode Button**  to cycle through to locate **One Button** mode .  
BUTTON
6. Press the **Shutter/Select Button**  to enter **One Button** menu.
7. Use the **Power/Mode Button**  to cycle through options.
8. Press the **Shutter/Select Button**  to select a highlighted option.
9. To exit, hold down the **Shutter/Select Button**  for two seconds or cycle through to **EXIT** and press the **Shutter/Select Button**  to select it.


The next time you power your camera **ON**, it will begin recording in its **Default Power Up Mode**. To stop recording, push and hold  for two seconds.

**ONE BUTTON MODE (continued):**

To exit **One Button** mode:

1. Power camera **ON**.
2. Press and hold the **Shutter/Select Button**  until **1**  shows in the LCD window.
3. Press the **Shutter/Select Button**  to enter.
4. Use the **Power/Mode Button**  to highlight **OFF**.
5. Press the **Shutter/Select Button**  to select it.
6. To exit, hold down the **Shutter/Select Button**  for two seconds or cycle through to **EXIT** and press the **Shutter/Select Button** .

**PRO TIP:**

To stop the capture process (**VIDEO** or **TIME LAPSE**) when in **ONE BUTTON**, press and hold the **Shutter/Select Button**  for two seconds. You will return to the **ONE BUTTON** menu where you can turn **ONE BUTTON** mode **OFF**.

**NOTE:** *One Button* mode is disabled when connected to Wi-Fi Remote or GoPro App.

---

## SET UP

---



### NTSC / PAL

The **NTSC** and **PAL** settings govern **Video** recording frame rate and playback when viewing **Video** on a TV/HDTV. Select **NTSC** when viewing a TV/HDTV in North America. Select **PAL** if viewing on a PAL TV/HDTV (most televisions outside of North America) or if viewing on a PAL TV/HDTV in any region.

---



### ONSCREEN DISPLAY

To display or hide the recording icons and file information on **Video** or the viewing screen during playback, turn **Onscreen Display (OSD) OFF** or **ON**.

---

OFF

---

ON (Default)

---



### CAMERA STATUS LIGHTS

Keep all four **Camera Status Lights** active, only two active (front and back) or turn **OFF** all lights.

---

4 (Default)

---

2

---

OFF

---





## SOUND INDICATOR

You can adjust volume or turn **OFF** the **Sound Indicator**.

100% (Default)

70%

OFF



MANUAL

## MANUAL POWER OFF

The HERO3+ can be configured to automatically power **OFF** after a specific period of inactivity (when no **Videos** or **Photos** are being taken and no buttons have been pressed).

MANUAL (Default)

60sec

120sec

300sec

















# SET UP



## MONTH / DAY / YEAR / TIME

Set the HERO3+ clock to ensure **Video** and **Photo** files are saved with the correct date and time.

### To change Month/Day/Year/Time:

1. Verify the camera is in **Settings** mode. If the **Settings** icon  on your camera's LCD screen is not showing, press the **Power/Mode Button**  repeatedly until it appears.
2. Press the **Shutter/Select Button**  to enter the **Settings** menu .
3. Use the **Power/Mode Button**  to cycle through **Settings** to locate the **Set Up** menu .
4. Press the **Shutter/Select Button**  to enter the **Set Up** menu. SET UP
5. Use the **Power/Mode Button**  to locate the **Month/Day/Year/Time** menu .
6. Press the **Shutter/Select Button**  to enter **Month/Day/Year/Time** menu; **Month (MM)** will be highlighted.
7. Press the **Shutter/Select Button**  to access the list of months (**1** to **12**).
8. Use the **Power/Mode Button**  to cycle through list until desired selection is highlighted.
9. Press the **Shutter/Select Button**  to select it.
10. To advance to the next option, press the **Shutter/Select Button** .
11. Repeat steps 7, 8 and 9 to make selections for day (**DD**), year (**YY**), hour (**HH**) and minutes (**MM**).
12. To exit, hold down the **Shutter/Select Button**  for two seconds or cycle through to **EXIT** and press the **Shutter/Select Button** .

**NOTE:** If the battery is removed from the camera for an extended period of time **Month/Day/Year/Time** will need to be set again.

**EXIT** EXIT

From the **EXIT** screen, press the **Shutter/Select Button**  to exit the **Set Up** menu.

**PRO  
TIP:**

If at any time you wish to exit from the **SET UP** menu, press and hold the **Shutter/Select Button**  for two seconds.

---


## WI-FI + WI-FI REMOTE


---



### WIRELESS CONTROLS

The built-in **Wi-Fi** allows your HERO3+ camera to connect to the Wi-Fi Remote (optional accessory, sold separately) or to the GoPro App using a smartphone or tablet.

**To turn Wi-Fi ON/OFF via the Wi-Fi On/Off Button :**

Press the **Wi-Fi On/Off Button ** to turn **Wi-Fi ON/OFF**. When turning **Wi-Fi ON**, the **Wi-Fi** mode will be set to the most recently used mode.

### **WI-FI REMOTE (SOLD SEPARATELY)**

Use the Wi-Fi Remote (sold separately) to control up to 50\* cameras remotely from distances of up to 600'/180m. The Wi-Fi Remote is wearable and waterproof to 10'/3m. For instructions on pairing and connecting the Wi-Fi Remote to the camera, please see the Wi-Fi Remote User Manual included with the remote.

\*Actual results may vary depending on presence of wireless interference.

### USING YOUR HERO3+ WITH THE GOPRO APP (FREE)

The GoPro App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, playback and sharing of select content and more.\*

Follow these steps to connect your HERO3+ to the GoPro App.

1. Download the GoPro App to your smartphone or tablet at the Apple App Store, Google Play or Windows Phone marketplace.
2. Press the **Power/Mode Button**  to power camera **ON**.
3. Press the **Wi-Fi On/Off Button**  twice, then press the **Shutter/Select Button**  to enter **Wi-Fi** menu .
4. Use the **Power/Mode Button**  to cycle through options, press the **Shutter/Select Button**  to select **GoPro App**.
5. In your smartphone's or tablet's Wi-Fi network settings, connect to the camera's Wi-Fi network. The network name will begin with "GOPRO-BP-", followed by a series of letters/numbers.
6. Enter the password "goprohero". (This is the camera's default password. You can customize the password at [gopro.com/update](http://gopro.com/update). If you've already customized the password, enter that password instead of "goprohero".)
7. Open the GoPro App on your smartphone or tablet. You will now be able to control the camera with your smartphone or tablet plus view, playback and share select content.\*

#### PRO TIP:

See what your HERO3+ sees by viewing it on your smartphone or tablet's screen.

\*For device compatibility, please see [gopro.com](http://gopro.com).

## STORAGE/MICROSD CARDS

The HERO3+ camera is compatible with **4GB, 8GB, 16GB, 32GB** and **64GB** capacity **microSD**, **microSDHC** and **microSDXC** memory cards. You must use a microSD card with a Class 10 speed rating. GoPro recommends using brand name memory cards for maximum reliability in high-vibration activities.

### To insert microSD card:



1. Slide memory card into card slot with label facing front of camera.
2. The card will click into place when fully inserted.

### To remove microSD card:



1. Place fingernail against edge of memory card and lightly press further into camera.
2. Card will spring out far enough to be removed.

### PRO TIP:

Use care when handling memory cards. Avoid liquids, dust and debris. As a precaution, turn off the camera before inserting or removing the card. Check manufacturer guidelines regarding use in acceptable temperature ranges.

---

## SYSTEM REQUIREMENTS

---

### Minimum system requirements for best playback on Mac® and Windows® PCs:

- Mac OS® X 10.5 and later/ Microsoft Windows® Vista, 7 and later
- 2nd generation Intel® Core™-based processor or AMD equivalent (3rd generation Intel Core-i7 recommended)
- 2GB RAM (4GB or greater recommended)
- Graphics processor comparable to an Intel HD Graphics 3000, nVidia GeForce 600 Series, AMD Radeon HD6000 Series or better

**PRO  
TIP:**

Want to see your **Video** and **Photos** on the big screen? Connect your HERO3+ directly to your TV/HDTV using a **Micro HDMI Cable, Composite Cable** or **Combo Cable** (optional accessories, sold separately).


---

# TRANSFERRING FILES


---

## TO TRANSFER VIDEO AND PHOTO FILES TO A COMPUTER

### On a PC:

1. Connect the camera to the computer using included USB cable.
2. Press the **Power/Mode Button**  to turn **ON** the camera.
3. Double click “My Computer” and locate “Removable Disk”.
4. If “Removable Disk” is not showing, close “My Computer” folder and reopen it. The “Removable Disk” icon should appear.
5. Double click “Removable Disk” icon.
6. Double click “DCIM” folder icon.
7. Double click “100GOPRO” icon to view all **Photo** and **Video** files.
8. Copy files to the computer or external hard drive.

### On a Mac:

1. Connect the camera to Mac using included USB cable.
2. Press the **Power/Mode Button**  to turn **ON** the camera.
3. Icon will appear on desktop. Double click the icon to access files.
4. Copy files to computer or external hard drive.














## TO VIEW VIDEOS AND PHOTOS

**Videos** and **Photos** can be viewed on a TV/HDTV or the LCD Touch BacPac (optional accessory, sold separately).

### PLAYBACK ON TV/HDTV

#### To browse Videos and Photos:

1. Plug the camera into a TV/HDTV with a **Micro HDMI Cable**, **Composite Cable** or **Combo Cable** (optional accessories).
2. Turn camera **ON**.
3. On your camera, press the **Power/Mode Button**  to cycle to **Playback** . Press the **Shutter/Select Button** .
4. HERO3+ displays thumbnail previews of all **Videos** and **Photos** on the SD card. **Photo** sets taken in **Continuous Photo**, **Photo Burst** and **Time Lapse** display the first **Photo** in a series.
5. While in thumbnail preview, use the **Power/Mode Button**  to cycle through thumbnails. Press the **Shutter/Select Button**  to view.
6. Use  and  to navigate backward and forward to see more media files on your memory card.
7. Depending on whether you are viewing **Videos** or **Photos**, different control options will appear. Use the **Power/Mode Button**  and the **Shutter/Select Button**  to navigate.

**NOTE: Burst Photo and Time Lapse files will display the first Photo in the series.**  
To view all **Photos** in a series, use the **Power/Mode Button**  to select **View** and press the **Shutter/Select Button** .

---

## PLAYBACK

---

### **PLAYBACK ON LCD TOUCH BACPAC (SOLD SEPARATELY)**

Playback using the LCD Touch BacPac™ follows a similar process/procedure as described with a few slight variations.

▶ See the LCD Touch BacPac User Manual for more information.

---

## BATTERY

---

### **MAXIMIZING BATTERY LIFE**


To maximize battery life, turn Wi-Fi **OFF**. To maximize battery life when shooting longer-duration activities, turn **OFF** or detach the LCD Touch BacPac™ (optional accessory, sold separately). Extreme cold temperatures may decrease battery life. To maximize battery life in cold conditions, keep camera in a warm place prior to use. Shooting with Protune mode turned **ON** will increase power consumption.

## CHARGING THE BATTERY

The battery icon displayed in the camera's LCD will blink when the battery drops below 10%. If recording is occurring when battery reaches 0%, the camera will save the file and power **OFF**.

### To charge the battery:

1. Connect the camera to a computer or USB power supply (such as the Wall Charger or Auto Charger).
2. The red **Status Indicator Light** remains **ON** while the battery is charging.
3. The red **Status Indicator Light** will turn **OFF** when the battery is fully charged.

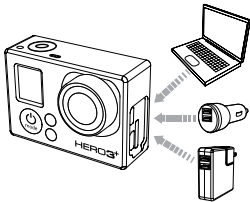

You can also charge the battery outside the camera using the Dual Battery Charger (optional accessory, sold separately).

No damage will occur to the camera or the battery if used prior to full charge. Spare batteries and additional charging accessories are available at: **gopro.com**.

---

# BATTERY

---


## USING THE CAMERA WHILE CHARGING

You can capture **Video** and **Photos** while charging the camera's battery. Simply plug the camera into a computer or any USB charging device using the included USB Cable.

## REMOVING THE BATTERY FROM THE CAMERA

The HERO3+ battery is designed to have a tight fit to maximize reliability in high-vibration activities.

### To remove the battery:

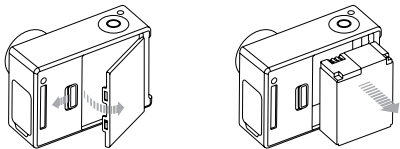

1. Remove the battery door by placing your thumb in the indentation in the battery door (on the back of the camera) and sliding it to the left.
2. Allow the door to pop out. Grasp the battery pull-tab and remove from the camera.

---

## IMPORTANT WARNING MESSAGES

---

### MICROSD CARD MESSAGES

<b>NO SD</b>	No card present. The camera requires a <b>microSD</b> , <b>microSDHC</b> or <b>microSDXC</b> card to record <b>Video</b> or take <b>Photos</b> .
<b>SD FULL</b>	Card is full. Delete files or swap card.
<b>SD ERROR</b>	Camera unable to access card.

---

### FILE REPAIR ICON ON THE LCD

---



If you see the **File Repair** icon on the LCD screen, your **Video** file was corrupted during recording. Press any button and the camera will repair the file.

---

### TEMPERATURE WARNING ICON ON THE LCD

---



The **Temperature Warning** icon will appear on the LCD when the camera has become too hot and needs to cool down. Simply let it sit and cool before attempting to use it again. Your camera will not allow itself to overheat—do not worry, no damage has occurred.

---

## THE FRAME


---

### USING THE FRAME

The Frame is the smallest, lightest way to mount your GoPro. It enables ultra-compact, low-profile mounting and full-time access to the microSD card and camera ports for live-feed video, charging and data offload.

#### To remove camera from The Frame:


1. Unhook the latch on the top right side of The Frame.
2. Holding the latch open, slide the camera out of The Frame.

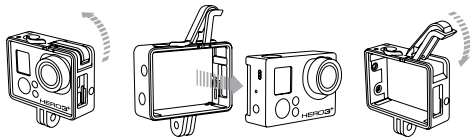


**NOTE:** *The Frame does not provide waterproof protection for your camera, and is not intended for use in wet, dirty or extreme conditions.*

**To secure camera in The Frame:**

1. Unhook the latch on the top right side of The Frame.
2. Holding the latch open, slide the camera into The Frame.
3. When the camera is flush with The Frame, close the latch to secure.

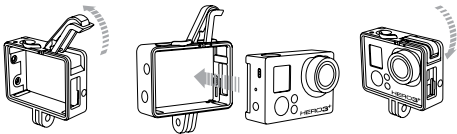**Using The Frame with an LCD Touch BacPac™ or Battery BacPac™ (sold separately):**

1. Unhook the latch on the top right side of The Frame.
2. Unhook the metal support arm and extend it to 90°. The arm must be used for the BacPac to be properly secured.
3. Slide camera into The Frame until the BacPac rests against the support arm, then close the latch.

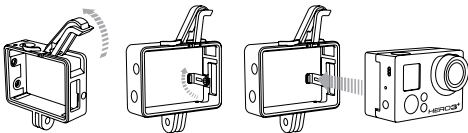

---

## CUSTOMER SUPPORT

---

GoPro is dedicated to providing the best possible service.  
To reach GoPro Customer Support, visit **[gopro.com/support](https://gopro.com/support)**.

---

## REGULATORY INFORMATION

---

To see the complete list of country certifications, refer to the WARRANTY +  
DISCLAIMERS document included with this product.

