EK 2000



Instruction manual



Contents

Important safety instructions	2
The EK 2000 diversity receiver	3
The frequency bank system	4
Areas of application	
Delivery includes	5
Product overview	
Overview of the EK 2000 diversity receiver	
Overview of the displays	7
Putting the diversity receiver into operation	9
Inserting the batteries/accupack	9
Charging the accupack	
Mounting the diversity receiver to a camera	
Using the diversity receiver	
Switching the diversity receiver on/off	
Deactivating the lock mode temporarily	
Selecting a standard display	
Using the operating menu	
The buttons	
Overview of the operating menu	
Working with the operating menu	
Adjusting settings via the operating menu	
The main menu "Menu"	
The extended menu "Advanced Menu"	
The "Sync Settings" submenu	
Synchronizing a transmitter with the receiver	
Using freely selectable receiving frequencies	
Cleaning the diversity receiver	32
Recommendations and tips	33
If a problem occurs	34
Accessories	35
Specifications	36
Index	38



For further information, visit the EK 2000 product page on our website at www.sennheiser.com.

Important safety instructions

- Read this instruction manual.
- Keep this instruction manual. Always include this instruction manual when passing the product on to third parties.
- Heed all warnings and follow all instructions in this instruction manual.
- Use only a cloth for cleaning the product.
- Do not place the product near any heat sources such as radiators, stoves, or other devices (including amplifiers) that produce heat.
- Only use attachments/accessories specified by Sennheiser.
- Refer all servicing to qualified service personnel.
 Servicing is required if the product has been damaged in any way, liquid has been spilled, objects have fallen inside, the product has been exposed to rain or moisture, does not operate properly or has been dropped.
- WARNING: To reduce the risk of short circuits, do not use the product near water and do not expose it to rain or moisture.
- This product is also intended for professional use. Commercial use is subject to the safety-at-work regulations. Sennheiser, as the manufacturer, is therefore obliged to expressly point out possible health risks arising from use.

This product is capable of producing sound pressure exceeding 85 dB(A). 85 dB(A) is the sound pressure corresponding to the maximum permissible volume which is by law (in some countries) allowed to affect your hearing for the duration of a working day. It is used as a basis according to the specifications of industrial medicine. Higher volumes or longer durations can damage your hearing. At higher volumes, the duration must be shortened in order to prevent hearing damage. The following are sure signs that you have been subjected to excessive noise for too long a time:

- You can hear ringing or whistling sounds in your ears.
- You have the impression (even for a short time only) that you can no longer hear high notes.

Intended use

Intended use of the EK 2000 diversity receiver includes:

- having read this instruction manual, especially the chapter "Important safety instructions",
- using the product within the operating conditions and limitations described in this instruction manual.

"Improper use" means using the product other than as described in this instruction manual, or under operating conditions which differ from those described herein.

The EK 2000 diversity receiver

This diversity receiver is part of the 2000 series. With this series, Sennheiser offers high-quality state-of-the-art RF transmission systems with a high level of operational reliability and ease of use. Transmitters and receivers permit wireless transmission with studio-quality sound.

Features of the 2000 series:

- Optimized PLL synthesizer and microprocessor technology
- HDX noise reduction system
- Adaptive diversity technology
- · Switching bandwidth of up to 75 MHz
- Scan function (Easy Setup) for scanning the frequency banks for unused channels

Adaptive diversity


This diversity receiver uses the ground connection of the line cable as its second antenna to provide improved reception.

The frequency bank system

The receiver is available in 6 UHF frequency ranges with up to 3,000 receiving frequencies per frequency range:



Each frequency range (Aw–Dw, Gw, GBw) offers 26 frequency banks with up to 64 channels each:

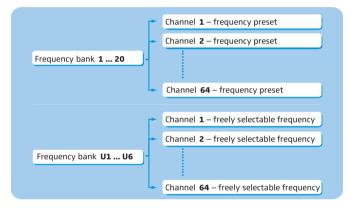

Each of the channels in the frequency banks "1" to "20" has been factorypreset to a fixed receiving frequency (frequency preset). The factorypreset frequencies within one frequency bank are intermodulation-free. These frequencies cannot be changed.

For an overview of the frequency presets, please refer to the supplied frequency information sheet. Updated versions of the frequency information sheet can be downloaded from the EK 2000 product page on our website at www.sennheiser.com.

The frequency banks "U1" to "U6" allow you to freely select and store receiving frequencies. It might be that these receiving frequencies are not intermodulation-free (see page 30).

Areas of application

The receiver can be combined with the following transmitters of the 2000 series:

Transmitter	Туре
SK 2000	Bodypack transmitter
SKM 2000	Radio microphone
SKP 2000	Plug-on transmitter

For more information, visit the EK 2000 product page on our website at www.sennheiser.com.

The transmitters are available in the same UHF frequency ranges and are equipped with the same frequency bank system with factory-preset frequencies. An advantage of the factory-preset frequencies is that

- a transmission system is ready for immediate use after switch-on,
- several transmission systems can be operated simultaneously on the preset frequencies without causing intermodulation interference.


Delivery includes

The packaging contains the following items:

- 1 EK 2000 diversity receiver
- 2 AA size batteries, 1.5 V
- 1 CA 2 camera adapter
- 1 CL 500 line cable
- 1 CL 1 line cable
- 1 instruction manual
- 1 frequency information sheet

Product overview

Overview of the EK 2000 diversity receiver

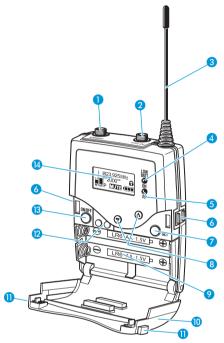


- Headphone output (PHONES), 3.5 mm jack socket, lockable
- 2 Line output (AF OUT), 3.5 mm jack socket, lockable (the ground contact is used by antenna II)
- 3 Antenna I
- Operation and battery status indicator, red LED (lit = ON, flashing = LOW BATT)
- 6 RF signal indication, green LED (lit = RF)
- 6 Charging contacts

- SET button
- 8 UP/DOWN button ▲/▼
- 9 Battery compartment
- Battery compartment cover (metal)
- Battery compartment catches
- Infra-red interface
- ON/OFF button with ESC function (cancel)
- 🚺 Display panel, backlit in orange

Overview of the displays

After switch-on, the diversity receiver displays the "Frequency/Name" standard display. For further illustrations and examples of the different standard displays, refer to page 13.

 The display backlighting is automatically reduced after approx. 20 seconds.



Display	Meaning	
 RF level "RF" (Radio Frequency) Audio level "AF" (Audio Frequency) 	 Diversity display: Antenna input I is active Antenna input II is active Squelch threshold level RF signal level: Field strength of the received signal Modulation of the transmitter Peak hold function When the display shows full deflection, the audio input level is excessively high. For details, see page 24. 	
③ Frequency	Current receiving frequency (see page 25)	
(4) Name	Freely selectable name of the receiver (see page 23)	
5 Lock mode icon	Lock mode is activated (see page 13)	


Display	Meaning
6 Battery status	Charge status:
	approx. 100%
	approx. 70%
	approx. 30%
	charge status is critical, the red LOW BATT LED d is flashing:
Ø Muting function	"Mute" is only displayed on the "Frequency/
"MUTE"	Name" standard display (see page 13) when the transmitter's RF signal is deactivated. The diversity receiver does then not output an audio signal.
or line output level AF OUT	The line output level AF OUT is only displayed on the "Frequency bank/Channel/ Name" standard display (see page 13).
8 Pilot tone "P"	Activated pilot tone evaluation (see page 27)

Putting the diversity receiver into operation

Inserting the batteries/accupack

For powering the diversity receiver, you can either use two 1.5 V AA size batteries or the rechargeable Sennheiser BA 2015 accupack or the DC 2 power adapter (see "Accessories" on page 35).

Open the battery compartment by pushing the two catches (1) in the direction of the arrows and open the cover (10).

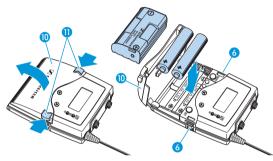

- Insert the two batteries or the accupack as shown above. Please observe correct polarity when inserting the batteries/accupack.
- Close the battery compartment by pressing on the center of the cover 10.

The battery compartment cover 🔟 locks into place with an audible click.

Charging the accupack

To charge the BA 2015 accupack (see "Accessories" on page 35) installed in the diversity receiver:

Insert the diversity receiver into the L 2015 charger (see "Accessories" on page 35).




The L 2015 charger can only charge the combination BA 2015 accupack/diversity receiver. Standard batteries (primary cells) or individual rechargeable battery cells cannot be charged.


Mounting the diversity receiver to a camera

Use the supplied CA 2 camera adapter to mount the receiver to a camera's flash mount.

Determine where on the perforated plate (5) the flash mount adapter (6) will need to be fastened so that the receiver can best be attached to the camera.

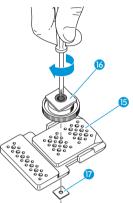


 - At this position, place a square nut 10 under the perforated plate 6.
- Fasten the flash mount adapter 16 to the perforated plate 19 using the square nut 10.
- Lift one side of the belt clip 18 as shown.



- Press down the belt clip (B) at one fixing point and pull it out of the receiver housing.
- Repeat for the other side.

Place the perforated plate 6 onto the rear of the receiver.

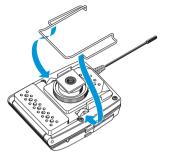

- Reinsert the belt clip (B).
- Use one of the supplied line cables to connect the line input of the camera to the socket 2.



Via the operating menu of the diversity receiver, adjust the level of the line output (AF OUT) to the input of the camera (see page 24).



The ground connection of the line cable serves as the antenna for the second diversity section. For details on the connector assignment, refer to the diagram on page 37.

Connect a pair of headphones to the socket 1.



Adjust the volume at the headphone output (PHONES) – either via the operating menu or using the UP/DOWN button / (see page 21).

Using the diversity receiver

To establish a transmission link, proceed as follows:

- 1. Switch the transmitter on (see the instruction manual of the transmitter).
- Switch the diversity receiver on (see next section). The transmission link is established and the receiver's RF level display "RF" () reacts.



It is vital to observe the notes on frequency selection on page 30.

If you cannot establish a transmission link between transmitter and receiver, read the chapter "Synchronizing a transmitter with the receiver" on page 30.

Switching the diversity receiver on/off

Push the two battery compartment catches (1) and open the battery compartment cover (1).



To switch the diversity receiver on:

Press the ON/OFF button 13.

The red ON LED ④ lights up and the standard display "Frequency/ Name" appears on the display panel.

To switch the diversity receiver off:

Keep the ON/OFF button (B) pressed until "OFF" appears on the display panel.

The red ON LED 4 goes off and the diversity receiver switches off.



When in the operating menu, pressing the ON/OFF button (3) will cancel your entry (ESC function) and return you to the current standard display.

Deactivating the lock mode temporarily

You can activate or deactivate the automatic lock mode via the "Auto Lock" menu item (see page 24). If the lock mode is activated, you have to temporarily deactivate it in order to be able to operate the receiver:



Press the SET button.

"Locked" appears on the display panel.

► Press the UP/DOWN button ▲/▼. "Unlock?" appears on the display panel.



ON/OFF


- Press the SET button.
 - When you are in the operating menu, the lock mode remains deactivated until you exit the operating menu.
 - When one of the standard displays is shown, the lock mode is automatically activated after 10 seconds.

The lock mode icon (5) flashes prior to the lock mode being activated again.



Selecting a standard display

Press the ON/OFF button to select a standard display.

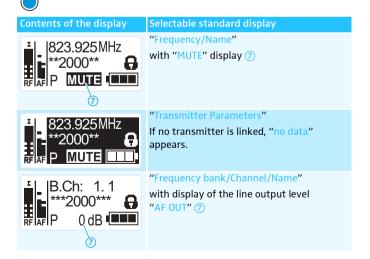

Using the operating menu

A special feature of the Sennheiser 2000 series is the consistent, intuitive menu structure of transmitters and receivers. As a result, adjustments to the settings can be made quickly – even in stressful situations, for example on stage or during a live show or presentation.

The buttons

Button	Function of the button
Press the ON/OFF button	 Switches the diversity receiver on and off Selects a standard display (see page 13) Cancels the entry and returns to the current standard display (ESC function)
Press the SET button	 Changes from the current standard display to the operating menu Calls up a menu item Enters a submenu Stores the settings and returns to the operating menu
Press the UP/DOWN button ▲/▼ ▼ ▲	 Adjusts the volume at the headphone output (PHONES) (see page 21) Changes to the next/previous menu item Changes the setting of a menu item

Cable Emulation (SK)

Exit

Overview of the operating menu

Main menu "Menu"		Submenu "Sync Settings"
Sync Phones Volume Squelch	Extended menu "Advanced Menu"	SK Settings SKM Settings SKP Settings Exit
Easy Setup Frequency Preset Name AF Out Auto Lock Advanced	Tune Sync Settings Pilot Tone LCD Contrast Reset	Submenu "SK Settings" "SKM Settings" "SKP Settings"
Exit	Software Revision Exit	Sensitivity Low Cut (SKM) Auto Lock Mute Mode (SK, SKP) RF Power Phantom Power48V (SKP)

Display	Function of the menu item	Page
Main menu "Men	u"	
Sync	Synchronizes a transmitter with the diversity receiver	19
Phones Volume	Adjusts the volume at the headphone output (PHONES)	21
Squelch	Adjusts the squelch threshold	21
Easy Setup	Scans for unused frequency presets, releases and selects frequency presets	22
Frequency Preset	Sets the frequency bank and the channel	23
Name	Enters a freely selectable name	23
AF Out	Adjusts the level of the line output (AF OUT)	24
Auto Lock	Activates/deactivates the automatic lock mode	24
Advanced	Calls up the extended menu "Advanced Menu"	25
Exit	Exits the operating menu and returns to the current standard display	-

Display	Function of the menu item	Page
Extended menu "	Advanced Menu"	
Tune	Sets the receiving frequencies for the frequency banks "U1" to "U6"	25
	Sets the channel and the receiving frequency for the frequency banks " $U1$ " to " $U6$ "	25
Sync Settings	Calls up the "Sync Settings" submenu	16
Pilot Tone	Activates/deactivates the pilot tone evaluation	27
LCD Contrast	Adjusts the contrast of the display panel	27
Reset	Resets the settings made in the operating menu	28
Software Revision	Displays the current software revision	28
Exit	Exits the extended menu "Advanced Menu" and returns to the main menu	-
"Sync Settings" s	ubmenu	
SK Settings	Selects an SK bodypack transmitter, sets the parameters to be transferred and activates/ deactivates the synchronization	28
SKM Settings	Selects an SKM radio microphone, sets the parameters to be transferred and activates/ deactivates the synchronization	
SKP Settings	Selects an SKP plug-on transmitter, sets the parameters to be transferred and activates/ deactivates the synchronization	
Exit	Exits the "Sync Settings" submenu and returns to the extended menu "Advanced Menu"	

Display	Function of the menu item	Page
"SK Settings" / "	SKM Settings" / "SKP Settings"	
Sensitivity	Adjusts the input sensitivity	28
Low Cut	Actives/deactivates the low cut filter ("SKM Settings" only)	
Auto Lock	Activates/deactivates the automatic lock mode	
Mute Mode	Sets the mode for the MUTE switch ("SK Settings" and "SKP Settings" only)	
RF Power	Adjusts the transmission power	
PhantomPower48V	Activates/deactivates the phantom powering ("SKP Settings" only)	
Cable Emulation	Emulates guitar cable capacities ("SK Settings" only)	
Exit	Exits the menu and returns to the "Sync Settings" submenu	

Working with the operating menu

1

If the lock mode is activated, you have to deactivate it in order to be able to work with the operating menu (see page 13).

By way of example of the "Frequency Preset" menu, this section describes how to use the operating menu.

Changing from a standard display to the operating menu



Press the SET button.

 
The current standard display is replaced by the main menu. The last called up menu item is displayed.

Selecting a menu item




Press the UP/DOWN button ▲/▼ to change to the "Frequency Preset" menu item.

The current setting of the selected menu item is displayed:



Changing and storing settings



 

- Press the UP/DOWN button A/V to set the frequency bank.
 - Press the SET button to confirm your selection.
 - Press the UP/DOWN button A/T to set the channel.
 - Press the SET button to store the setting.

SET

SET

SET

Canceling an entry



Press the ON/OFF button to cancel the entry. The current standard display appears on the display panel.

To subsequently return to the last edited menu item:



 Press the SET button repeatedly until the last edited menu item appears.

Exiting a menu item

To return to the next higher menu level:

🔻 🔺 🕨 Ch	ange to the	"Exit" r	nenu item.
----------	-------------	----------	------------



Adjusting settings via the operating menu

The main menu "Menu"

Synchronizing a transmitter with the diversity receiver – "Sync"

You can synchronize a suitable transmitter of the 2000 series with the receiver. By default, the following parameters are transferred to the transmitter during synchronization:


Setting	Transferred parameters
"Frequency Preset"	Current receiving frequency (see page 23)
"Name"	Current name set for the receiver (see page 23)
"Pilot Tone"	Current pilot tone setting of the receiver
	("Inactive"/"Active", see page 27)



Via the "Sync Settings" submenu, you can adjust additional parameters to be transferred to the transmitters (see page 16 and 28).

To transfer these parameters:

- Switch the transmitter and the diversity receiver on.
- On the receiver, call up the "Sync" menu item. "Sync" appears on the display panel of the receiver.
- Place the infra-red interface of the transmitter (see the instruction manual of the transmitter) in front of the infra-red interface of the receiver 12.

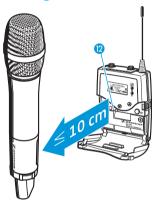

The parameters are transferred to the transmitter. When the transfer is completed, " \checkmark " appears on the display panel of the diversity receiver. The receiver then switches back to the current standard display.

To cancel the transfer:

Press the ON/OFF button (3) on the receiver.

" χ " appears on the display panel of the receiver. " χ " also appears if:

- no transmitter was found or the transmitter is not compatible,
- no transmitter was found and the synchronization process was canceled after 30 seconds,
- you canceled the transfer.

Adjusting the volume at the headphone output – "Phones Volume"

There are two ways to adjust the volume at the headphone output ($\ensuremath{\mathsf{PHONES}}\xspace)$:

CAUTION!	Hearing damage due to high volumes!
	Listening at high volume levels for long periods can lead to permanent hearing defects.
	 Set the volume to a low level before putting the head-
	phones on
	Do not continuously expose yourself to high volumes.

- 1. When one of the standard displays is shown on the display panel:
 - Press the UP/DOWN button // to adjust the volume at the headphone output (PHONES).
- 2. When you are in the operating menu:



Adjustment range: 0 to 50

Adjusting the squelch threshold – "Squelch"



Adjustment range: 5 to 25 dB μ V, adjustable in 2-dB steps, can be switched off

The squelch eliminates annoying noise when the transmitter is switched off or when there is no longer sufficient transmitter power received by the receiver.

CAUTION!



Danger of hearing damage!

If you switch the squelch off or adjust the squelch threshold to a very low value, loud hissing noise can occur in the receiver. The hissing noise can be loud enough to cause hearing damage!

- Always make sure that the squelch is switched on.
- Before adjusting the squelch threshold, set the volume of the headphone output PHONES to the minimum (see page 21).
- Never change the squelch threshold during a live transmission.

 Adjust the squelch threshold – with the transmitter switched off – to the lowest possible setting that suppresses hissing noise.



A high squelch threshold reduces the transmission range.

The squelch should only be switched off for servicing purposes. With the squelch threshold set to "5 dB", you switch the squelch off by keeping the DOWN button \checkmark pressed for 3 seconds.

Display	Squelch is
() () () () () () () () () ()	switched on. The dotted line 🔞 displays the squelch threshold.
1 ■ 823.925MHz **2000**	switched off. The dotted line ⁽¹⁾ goes off and the audio level display "AF" shows full deflection (hissing noise).

If you have accidentally switched off the squelch:


Press the UP button to switch the squelch on.


Scanning for, releasing and selecting frequency presets – "Easy Setup"

Menu item	Function of the menu item
Reset List	Releases all locked frequency presets
Current List	Selects an unused frequency preset

Menu item	Function of the menu item
Scan New List	Automatically scans for unused receiving frequencies
	(frequency preset scan)
	If receiving frequencies are used, they will be locked; if
	receiving frequencies are unused, they will be released.
	After the frequency preset scan, you can select an unused
	frequency preset.

 Selecting the frequency bank and the channel – "Frequency Preset"

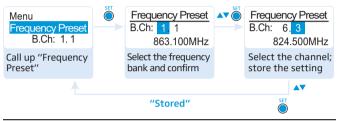



Only the factory-preset receiving frequencies within one frequency bank ("1" to "20") are intermodulation-free. It is vital to observe the notes on frequency selection on page 30.

Overview of the frequency banks and channels:

Frequency bank	Channels	Туре
"1" to "20"	up to 64 per frequency bank	System bank: frequencies are factory-preset
"U1" to "U6"	up to 64 per frequency bank	User bank: frequencies are freely selectable

Entering a name – "Name"



Via the "Name" menu item, you can enter a freely selectable name (e.g. the name of the performer) for the receiver. The name is displayed on the standard display (see page 7). The name can consist of up to 8 characters such as:

- letters (without pronounciation marks),
- numbers from 0 to 9,
- special characters and spaces.

 
To enter a name, proceed as follows:

Press the UP/DOWN button A/T to select a character.



Press the SET button to change to the next segment/character or to store the complete entry.

Adjusting the audio output level – "AF Out"



Adjustment range: -24 dB to +18 dB, adjustable in 6-dB steps

Via the "AF Out" menu item, you can adjust the level of the audio output from the receiver to the input of the connected camera.

Activating/deactivating the automatic lock mode – "Auto Lock"



The lock mode prevents that the volume at the headphone output PHONES is accidentally adjusted. In addition, the lock mode prevents that the diversity receiver is accidentally switched off or programed during operation. The lock mode icon (5) \bigcirc the current standard display indicates that the lock mode is activated. For information on how to use the lock mode, refer to page 13.

The extended menu "Advanced Menu"

To get into the extended menu "Advanced Menu":

From the main menu, select "Advanced".

Setting the receiving frequencies and the frequency banks "U1" to "U6" – "Tune"

When you have selected one of the system banks and then select the "Tune" menu, the diversity receiver automatically switches to channel 1 of the frequency bank "U1". In this case, "U1.1" briefly appears on the display panel. Upon delivery, the channels of the frequency banks "U1" to "U6"

Via the "Tune" menu item, you can:

- set a receiving frequency to be stored in the current channel of the selected frequency bank ("U1" to "U6") or
- 2. first select a frequency bank ("U1" to "U6") and a channel and then assign this channel a receiving frequency.

Setting a receiving frequency for the current channel

are not assigned a receiving frequency.

Press the UP/DOWN button A/V until the "Tune" menu item appears.



Press the SET button.

The MHz section of the receiving frequency of the channel is highlighted.



It is vital to observe the notes on frequency selection on page 30.

Press the UP/DOWN button A/V to set the MHz section of the frequency.

	n of the frequency is	5 5
Press the UP/I frequency.	00WN button ▲/▼ to	set the kHz section of the
\frown	1 / 1	frequency. nel. The "Tune" menu item
Selecting a channel and	d assigning this cha	annel a frequency
Press the UP/I appears.	00WN button ▲/▼ ur	ntil the "Tune" menu item
SET Press the SET bank is highlig		ressed until the frequency
Advanced Menu	Tune	
Tune	823.925 MHz	823.925 MHz
823.925 MHz	B.Ch: U1. 1	B.Ch: U5. 1
823.925 MHz Call up "Tune" (special function)	B.Ch: U1. 1 Select the frequency bank and confirm	B.Ch: U5. 1 Select the channel; store the setting
Call up "Tune"	Select the frequency bank and confirm	Select the channel; store the setting
Call up "Tune" (special function)	Select the frequency bank and confirm	Select the channel; store the setting
Call up "Tune" (special function)	Select the frequency bank and confirm	Select the channel; store the setting
Call up "Tune" (special function)	Select the frequency bank and confirm "Stored" DOWN button ▲/▼ to putton to confirm the	Select the channel; store the setting

Press the SET button to confirm the channel. The frequency (MHz section) is highlighted.

Set the desired frequency (MHz and kHz section) as described in the previous chapter.

SET

Activating/deactivating the pilot tone evaluation – "Pilot Tone"



The transmitter adds an inaudible signal, known as the pilot tone, to the transmitted signal. The diversity receiver detects and evaluates the pilot tone.

The pilot tone supports the diversity receiver's squelch function, thus protecting against interference due to RF signals from other devices.


Display	Meaning
No icon	The pilot tone evaluation is deactivated.
Ρ	The pilot tone evaluation is activated but the receiver does not receive a pilot tone.
Р	The pilot tone evaluation is activated. The receiver receives a pilot tone.

Adjusting the contrast of the display panel – "LCD Contrast"



You can adjust the contrast of the display panel in 16 steps.

Resetting the settings made in the operating menu – "Reset"

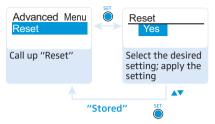

When resetting the settings made in the operating menu, only the selected settings for the pilot tone and for the frequency banks "U1" to "U6" remain unchanged. For an overview of the factory-preset default settings, refer to the enclosed frequency information sheet.

Displaying the software revision – "Software Revision"

You can display the current software revision of the diversity receiver.

The "Sync Settings" submenu

Display	Function
SK Settings	Calls up "SK Settings"
SKM Settings	Calls up "SKM Settings"
SKP Settings	Calls up "SKP Settings"
Exit	Exits the "Sync Settings" submenu and returns to the
	extended menu "Advanced Menu"

"SK Settings", "SKM Settings" and "SKP Settings"

Via the "SK Settings", "SKM Settings" and "SKP Settings" menus, you can set the transmitter parameters directly on the diversity receiver and activate or deactivate the transfer of these parameters to the transmitter.



Via the "Sync" menu item, you can transfer the parameters from the receiver to the transmitters via the infra-red interface (see page 19).

Display	Function	Settings	
Sensitivity	Adjusts the input sensitivity:		
	SK	–60 dB to 0 dB, adjustable in steps of 3 dB	
	SKM and SKP	–48 dB to 0 dB, adjustable in steps of 6 dB	
Low Cut (SKM only)	Low cut filter	/ <i></i>	
Auto Lock	Lock mode	Inactive, Active	
Mute Mode (SK, SKP only)	Mute mode	Disabled, RF On/Off, AF On/Off	
RF Power	Transmission power	Low, Standard, High	
PhantomPower48V (SKP only)	Phantom powering	Inactive, Active	
Cable Emulation (SK only)	Emulates guitar cable capacities	Minimum, Low, Medium, High	

Synchronizing a transmitter with the receiver

i

When synchronizing a transmitter with a diversity receiver, please observe the following:

Only use a transmitter and a diversity receiver from the same frequency range (see the type plates on the transmitter and the diversity receiver).

Make sure that the desired frequencies are listed in the enclosed frequency information sheet.

You can also contact your Sennheiser partner who will be pleased to calculate intermodulation-free frequencies for you.

Make sure that the desired frequencies are approved and legal in your country and, if necessary, apply for an operating license.

Upon delivery, transmitter and diversity receiver are synchronized with each other. If, however, you cannot establish a transmission link between transmitter and diversity receiver, you have to synchronize the channels of the devices:

Deactivate the RF signal on all transmitters (see the instruction manual of the transmitter).

This prevents that, during the frequency scan, the channels used by switched-on transmitters are displayed as "used".

- With a diversity receiver, perform a frequency preset scan to scan the frequency banks for unused channels ("Scan New List", see page 23).
- Select a frequency bank and a channel on this diversity receiver ("Current List", see page 22).

If you want to set up a multi-channel system, select a frequency bank with a sufficient number of unused channels for all planned transmission links.

Via the "Sync Settings" submenu, you can set additional transmitter parameters directly on the diversity receiver and activate or deactivate the transfer of these parameters to the transmitter (see page 28).

Synchronize a transmitter with the diversity receiver (see page 19). The receiver's frequency, name, pilot tone setting and, where applies, additional parameters activated via the "Sync Settings" submenu are transferred to the transmitter. Or:

- Manually set the transmitter to the same frequency bank and channel that you set on the receiver.
- Activate the RF signal on this transmitter. The transmission link is established.

If you want to set up a multi-channel system:

- Repeat the following 4 steps for each additional transmission link:
 - Perform a frequency preset scan with the next diversity receiver.
 - Select a channel from the same frequency bank as with the first diversity receiver.
 - Synchronize a transmitter with the diversity receiver.
 - Activate the RF signal on the transmitter.

Using freely selectable receiving frequencies

You can also freely select the receiving frequencies and store these frequencies in the frequency banks "U1" to "U6".



It might be that the freely selected frequencies are not intermodulation-free

If you are using frequencies from the frequency banks "U1" to "U6", it might be that the receiving frequencies are not intermodulation-free.

- Contact your Sennheiser partner who will be pleased to calculate intermodulation-free frequencies for you (see www.sennheiser.com).
- Set each diversity receiver to the same frequency bank ("U1" to "U6").
- On one of the receivers, select a channel within this frequency bank and assign this channel a receiving frequency (see page 25).
- Synchronize a transmitter with this receiver (see the instruction manual of the transmitter). Or:
- Manually set the transmitter to the same frequency bank and channel that you set on the receiver.
- Repeat for the remaining transmitters and receivers as described above.

Cleaning the diversity receiver

CAUTION!	Liquids can damage the electronics of the diversity receiver!
	Liquids entering the housing of the device can cause a short-circuit and damage the electronics.
	Keep all liquids away from the diversity receiver.
	Do not use any solvents or cleansing agents.
Use a cloth t	to clean the diversity receiver from time to time.

Recommendations and tips

... for the diversity receiver

- Make sure that the antenna and the headphone or line cable do not cross.
- For best results, make sure that the transmitter sensitivity is correctly adjusted.

... for optimum reception

- Transmission range depends to a large extent on location and can vary from about 10 m to about 150 m. There should be a "free line of sight" between transmitting and receiving antennas.
- To avoid overloading the receiver, observe a minimum distance of 5 m between transmitting and receiving antennas.

... for multi-channel operation

- When operating a multi-channel system, you should only use the channels within one frequency bank. Each of the frequency banks "1" to "20" accommodates factory-preset frequencies which are intermodulation-free.
- The frequency banks "U1" to "U6" allow you to freely select and store receiving frequencies (see page 25).
- When using several transmitters simultaneously, interference can be avoided by maintaining a minimum distance of 20 cm between two transmitters.

If a problem occurs ...

Problem	Possible cause	Possible solution
Diversity receiver cannot be operated, "Locked" appears on the display panel	Lock mode is activated	Deactivate the lock mode (see page 13).
No operation indication	Batteries are flat or accupack is flat	Replace the batteries or recharge the accupack (see page 9).
No RF signal	Transmitter and receiver are not on the same channel	Set the transmitter and receiver to the same channel.
		Synchronize the transmitter with the receiver (see page 30).
	Transmission range is exceeded	Check the squelch threshold setting (see page 21).
		Reduce the distance between transmitter and receiver.
	RF signal is deactivated ("RF Mute")	Activate the RF signal (see the instruction manual of the transmitter).
RF signal available, no audio signal, "MUTE" appears on the display	Transmitter is muted	Cancel the muting (see the instruction manual of the transmitter).
	Receiver's squelch threshold is adjusted too high	Reduce the squelch threshold setting (see page 21).
panel	Transmitter doesn't transmit a pilot tone	Deactivate the pilot tone evaluation (see page 27).
Audio signal has a high level of back- ground noise	Transmitter sensitivity is adjusted too low	Adjust the transmitter sensitivity correctly (see the instruction manual of the transmitter).

Problem	Possible cause	Possible solution
Audio signal is distorted	Transmitter sensitivity is adjusted too high	Adjust the transmitter sensitivity correctly (see the instruction manual of the transmitter).
	Receiver's audio output level is adjusted too high	Reduce the audio output level ("AF Out", see page 24).
No access to a certain channel	During scanning, an RF signal has been detected on this channel and the channel has been locked	Set the transmitter operating on this channel to a different channel and redo the frequency preset scan (see page 22).
	During scanning, a transmitter of your system operating on this channel has not been switched off	Switch the transmitter off and redo the frequency preset scan (see page 22).

If a problem occurs that is not listed in the above table or if the problem cannot be solved with the proposed solutions, please contact your local Sennheiser partner for assistance.

To find a Sennheiser partner in your country, search at www.sennheiser.com under "Service & Support".

Accessories

The following EK 2000 accessories are available from your specialist dealer:

Cat. No.	Accessory
009950	BA 2015 accupack
009828	L 2015 charger
009827	DC 2 power adapter for external DC powering (12 V)
009986	CA 2 camera adapter
005022	CL 1 line cable (jack to jack, balanced)
087047	CL 500 line cable (XLR-3 to jack, balanced)

Specifications

RF characteristics

Modulation
Frequency ranges

Receiving frequencies

Switching bandwidth Nominal/peak deviation Receiver principle Sensitivity (with HDX, peak deviation) Adjacent channel rejection Intermodulation attenuation Blocking Squelch

Pilot tone squelch

AF characteristics Line

Compander system S/N ratio (1 mV_{RF}, peak deviation) THD AF output voltage (at peak deviation, 1 kHz AF) Output power at 2.4 V, 5% THD and nominal deviation Adjustment range of line output level

wideband FM
516–558, 558–626, 626–698,
718–790, 790–865, 606–678 MHz
(Aw to Dw, Gw, GBw, see page 4)
up to 3,000 receiving frequencies,
tuneable in steps of 25 kHz
20 frequency banks, each with up
to 64 factory-preset channels
6 frequency banks, each with up
to 64 user programmable channels
up to 75 MHz
±24 kHz/±48 kHz
adaptive diversity
$<\!4$ µV, typ. $<$ 1.6 µV for 52 dBA $_{rmsS/N}$
typ.≥80 dB
typ.≥78 dB
≥ 80 dB
Off, 5 to 25 dBµV,
adjustable in steps of 2 dB
evaluation can be switched off

Sennheiser HDX Line: \geq 120 dBA_{rms} Phones: approx. 90 dBA_{rms} \leq 0.9% Line: 3.5 mm jack socket: +17 dBu (mono, balanced) Phones: 2 x 12 mW at 32 Ω 42 dB, adjustable in steps of 6 dB

Overall device

Temperature range Power supply

Nominal voltage Power consumption:

• at nominal voltage

with switched-off receiver
 Operating time (line operation)
 Dimensions
 Weight (incl. batteries)

In compliance with

Europe

USA

Approved by

Canada

-10°C to +55°C 2 AA size batteries, 1.5 V or BA 2015 accupack 2,4 V - - -

typ. 140 mA (30 mW) \leq 25 μ A typ. 9 hrs approx. 82 x 64 x 24 mm approx. 130 g

CE	EMC:	EN 301489-1/-9
	Radio:	EN 300422-1/-2
	Safety:	EN 60065
FC	47 CFR 15 subpart B	

Industry Canada RSS-123 IC 2099A-EK2000 limited to 698 MHz

Connector assignment

3.5 mm jack plug		
Line	Phones	
wired balanced	wired in parallel	
+ -	+ +	

Index

Index

Accessories 35 Accupack charging 9 inserting 9 Advanced Menu (extended menu) overview 16 25 settinas AF Out adjusting the output level 24 Auto Lock 24 Batteries battery status 8 inserting 9 Buttons function of the buttons 14 ON/OFF button 6 SET button 6 UP/DOWN button 6 Channel assigning a frequency 26 selecting 23 setting a frequency 25 Displays adjusting the contrast 27 AF (audio level) 7 AF OUT 8 LOW BATT 8 MUTE 8 overview 7 RF (RF level) 7 standard displays 13

Easy Setup 22

Frequency bank selecting 23 setting a frequency 25 Frequency bank system 4 Frequency Preset 23 Frequency presets releasing (Reset List) 22 searching for (Scan New List) 22 selecting (Current List) 22

Headphones adjusting the volume 21

LCD Contrast 27 Lock mode activating/deactivating 24 deactivating temporarily 13 lock mode icon 7 Locked 13 LOW BATT 6

Menu (main menu) overview 15 settings 19

Name entering a name 23

Operating menu overview 15 settings 19 using 18

Phones Volume 21 Pilot Tone 27 Receiver cleaning 32 mounting to a camera 10 switching off 12 switching on 12 Reset 28 RF signal indication 6

Software Revision displaying 28 Squelch 21 Sync 19

Transmitter synchronizing with receiver 30 Troubleshooting 34 Tune 25

🗾 SENNHEISER

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany www.sennheiser.com

Publ. 12/16, 549125/A03