



## Model R57 & R59 Instructions

Remove and attach the new cartridge using a soldering iron as shown. The GREEN wire attaches to the terminal next to the embossed plus (+) sign (or single-digit number).

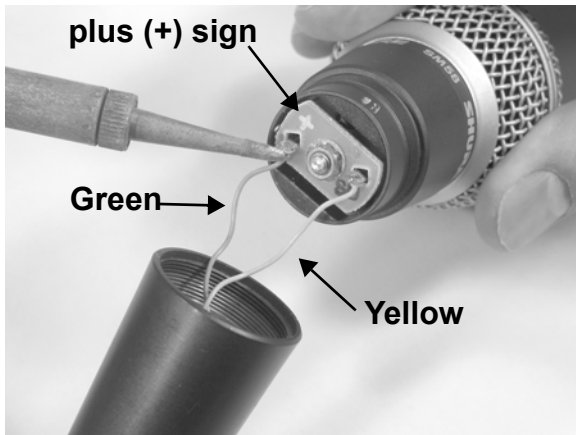

**NOTE:** On older models, there may be a third, black wire. Connect this wire to the case ground nut between the green and yellow terminals on the cartridge.

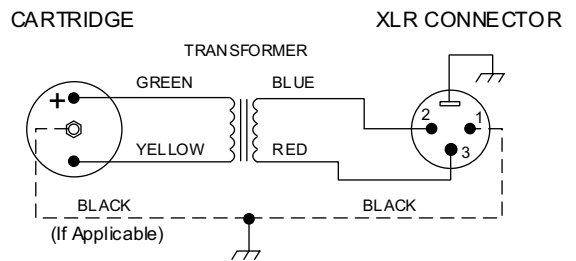

**IMPORTANT:** Twist the cartridge three times counterclockwise before screwing the cartridge onto the case. This prevents strain on the wires.

